HONDA
POWER PRODUCTS

WATER PUMP

WX10
WX10K1

PARTS CATALOGUE

3

13YE90E3

© Honda Motor Co., Ltd. 2005

WX10

WX10K1

FOREWORD INDEX 1

ENGINE GROUP 2

FRAME GROUP 3

PART NUMBER INDEX 4

PART NAME INDEX 5

Instruction for use of parts catalogue

- **This parts catalogue was prepared based on the latest information available as of January 10, 2005.**
  - See the parts catalogue news for any revision that is made after January 10, 2005.
- **Always specify the part number when ordering a part.**
  - Check the model, type, serial numbers, color, maker, and the size as needed before ordering a part.
  - Note that the illustrations (part drawings) can differ from the actual parts in shape.
    They are given just to help you to refer to the parts.
- **When modifications or additions to this parts catalogue are made, a revised edition will be issued at an appropriate time, with successively progressing revision numbers on the cover. We recommend obtaining such revisions in order to keep your parts catalogue up-to-date at all times. To check whether a parts catalogue revision has been issued, please contact your Honda distributor.**

Initial version issue date September 20, 1997
Honda Motor Co., Ltd.

CONTENTS

	Page	Address No.	
● How to refer to the part information	2	B 2	1
● Part catalogue structure	3	B 3	
● When the parts were revised	4	B 4	
● Abbreviations used in the parts catalogue	4	B 4	
● How to check the part block and serial numbers	5	B 5	
● Models, parts catalogue codes and applicable serial numbers	6	B 6	
● Features of each type	8	B 8	
● Fuel hose, general purpose hoses and vinyl hose	9	B 9	
● FLAT RATE SERVICE TIME	10	B10	
● Illustrated index	15	B15	
● ENGINE GROUP	19	D 1	2
● FRAME GROUP	52	G 1	3
● PART NO. INDEX	59	H 1	4
● PART NAME INDEX	61	I 1	5

How to refer to the part information

Ⓐ Reference with “Illustrated index”

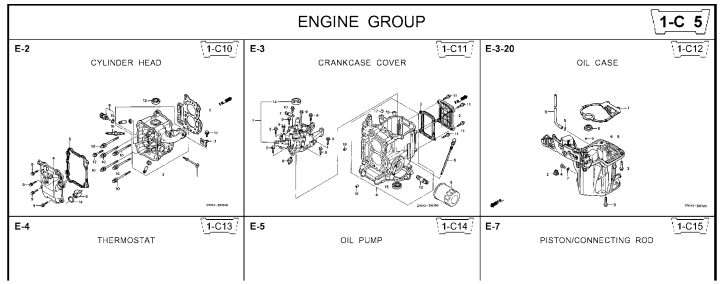

Ⓑ Reference with “Part number index”

PART NO. INDEX

Part Number	Address	Page	Ref.
06000			
06316-ZW9-000	1-G9	88	1
11000			
11300-ZW9-405	1-C11	27	1
11300-ZW9-406	1-C11	27	1
11340-ZW9-000	1-C11	27	2
11342-ZW9-000	1-C11	27	3
11381-ZW9-003	1-C12	28	1
12000			
12000-ZW9-405ZA	1-C11	27	4
12155-ZV4-A00	1-C13	29	1
12166-ZW9-000	1-C10	26	1
12209-GB4-681	1-C16	32	1
12210-ZW9-405ZA	1-C10	26	2
12216-ZE2-300	1-E8	55	1
	1-E11	58	1
15212-ZW9-000	1-C14	30	
15220-ZW9-003	1-C14	30	
15332-ZW9-000	1-E8	55	
15332-ZW9-A30	1-E11	58	
15400-PFB-004	1-C11	27	
15422-ZW9-000	1-C14	30	
15473-881-000	1-C14	30	
15474-ZW9-000	1-C14	30	
15611-921-000	1-C10	26	
15655-ZW9-000	1-C11	27	
16000			
16010-ZV4-005	1-D4	36	
16011-ZV4-005	1-D4	36	
16013-ZW9-003	1-D4	36	
16016-ZW9-003	1-D4	36	
16016-ZW9-721	1-D4	36	
16023-ZW9-003	1-D4	36	
16024-ZV4-650	1-D4	36	
16028-ZV4-650	1-D4	36	

Ⓒ Reference with “Part name index”

PART NAME INDEX

Part name	Address	Page	Ref.	
[A]				BOLT ,
ABSORBER ,FUEL	1-E15	62	5	
ARMATURE COMP.	1-D11	43	7	BOLT ,
ARM COMP. ,LINK JOINT	1-G6	85	18	BOLT ,
ARM COMP. ,SHIFT LINK	1-G6	85	14	BOLT ,
ARM COMP. ,TILT	1-F15	79	20	
ARM ,FUEL PUMP ROCKER	1-C16	32	4	
ARM ,REVERSE LOCK	1-F15	79	18	
ARM ,SHIFT LINK	1-F11	74	7	
ARM ,STOPPER	1-D1	33	12	BOLT ,
ARM ,THROTTLE REMOTE	1-F11	74	6	
ARM ,VALVE ROCKER	1-C16	32	3	
[B]				
BAG ,TOOL ,160MM	1-G5	84	10	
BAND	1-G6	86	37	
BAND B1,WIRE	1-F6	69	1	
BAND ,CORD	1-F3	67	18	BOLT ,
BAND ,TUBE CLIP ,11MM	1-E15	63	20	
BAND ,TUBE CLIP ,12.5MM	1-E15	63	19	BOLT ,

Address No.

E-2 CYLINDER HEAD 1-C10

Block No.

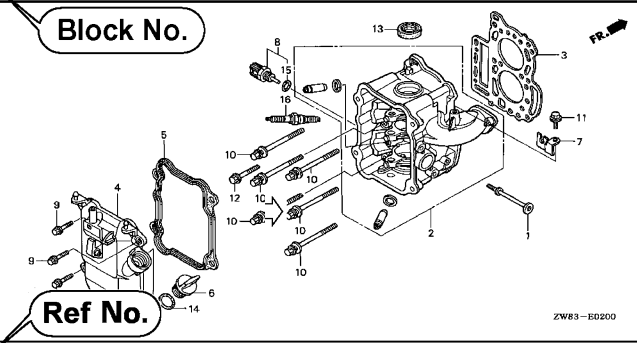

Service item	F.R.T.
O-RING, 26X2.7	0.1
.PLUG, SPARK	
O-RING, 9.5X1.5	0.2
.SENSOR ASSY., WATER TEMPERATURE	
COVER COMP., HEAD	0.3
.PACKING, HEAD COVER	
GASKET, CYLINDER HEAD	1.8
OIL SEAL, 20X32X6	2.4
HEAD COMP., CYLINDER	3.1

Ref No.

Ref. No.	Part No.	Description	Reqd. QTY BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	Serial No.	Parts catalogue code
1	12166-ZW9-000	STOPPER, ENGINE SIDE	2	2	2	2	2	2		
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*.....DARK GRAY	1	1	1	1	1	1		
3	12251-ZW9-003	GASKET, CYLINDER HEAD	1	1	1	1	1	1		
4	12310-ZW9-000	COVER COMP., HEAD	1	1	1	1	1	1		
5	12312-ZW9-000	PACKING, HEAD COVER	1	1	1	1	1	1		
6	15611-921-000	CAP, OIL (NO GAUGE)	1	1	1	1	1	1		
7	16617-ZW9-000	HOLDER, CABLE	1	1	1	1	1	1	-------- --------	SC,SG
	16617-ZW9-010		1	1	1	1	1	1	-------- 1001800	LHC,LHD
			1	1	1	1	1	1	1001801 --------	LHC,LHD
8	35673-ZW5-003	SENSOR ASSY., WATER TEMPERATURE	1	1	1	1	1	1		
9	90003-ZW9-000	BOLT, FLANGE, 6X22	4	4	4	4	4	4		
10	90007-ZW9-003	BOLT, FLANGE, 8X83	6	6	6	6	6	6		
11	90011-ZW9-000	BOLT, FLANGE, 6X14(CT20D)	1	1	1	1	1	1		
12	90020-ZW9-000	BOLT, FLANGE, 8X40	2	2	2	2	2	2		
13	91202-KJ9-003	OIL SEAL, 20X32X6	1	1	1	1	1	1		
14	91301-805-000	O-RING, 26X2.7	1	1	1	1	1	1		
15	91307-PK2-005	O-RING, 9.5X1.5(HONDA KIKAKI)	1	1	1	1	1	1		
16	98059-55916	PLUG, SPARK (CR5EH-9)	2	2	2	2	2	2		
	98059-55926	PLUG, SPARK (U16FER9)	2	2	2	2	2	2		

44

2000.09.20 E

Page No.

Part catalogue structure

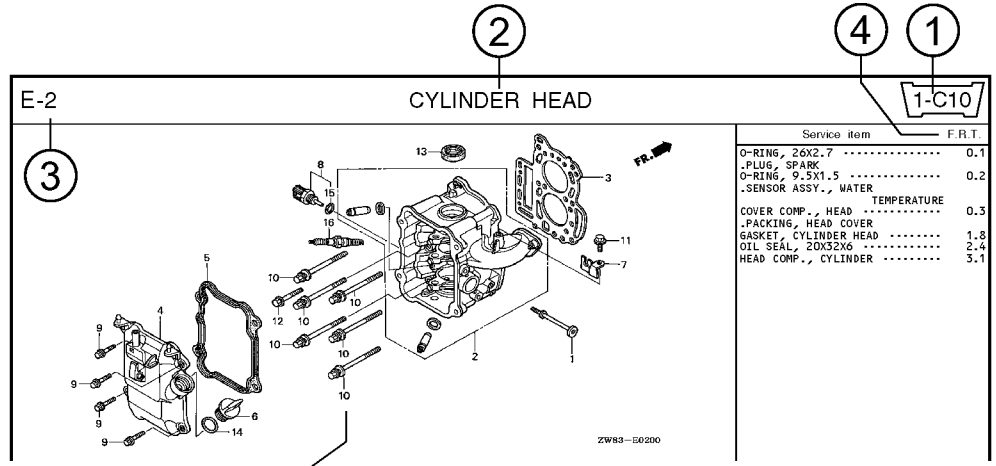

①Address number
- Address No. is provided (in place of the page No.) to help you refer to the part with the part No. or part name.

②Block title ③Block number

④Service item/Flat rate time

⑤Reference number
- Title number marked with the parenthesis or parentheses indicates that it continues from the previous page.

⑥Part number ⑦Honda color code

⑧Description

⑨Assemblies
- Sections framed with broken lines in the exploded view drawings are available as complete assemblies. (Their individual parts can also be obtained.)

⑩Color description

⑪Note
- Notes are shown with the parentheses in the part name column.

⑫Required quantity
- Required QTY shown in the parenthesis or parentheses indicates the optional part.
- Required QTY marked with “N” Indicates the optional part that should be selected as needed.
- Required QTY indicates the number of the part used in the block.

⑬Serial number

⑭Type
- When the type column is blank, it indicates that the part is applicable to all types.
- As the type of the actual unit may differ from the “parts catalogue, type” please refer to “Models, types and applicable serial numbers” for confirmation.

⑮ [ ]
- Parts enclosed within a dotted line [ ] are covered in a different block.

⑯ ⇦
- A hollow arrow ⇦ indicates the block No. for the parts enclosed within a dotted line [ ] .

⑰ ←
- A solid arrow ← indicates the block No. the part in question is connected to.

When the parts were revised

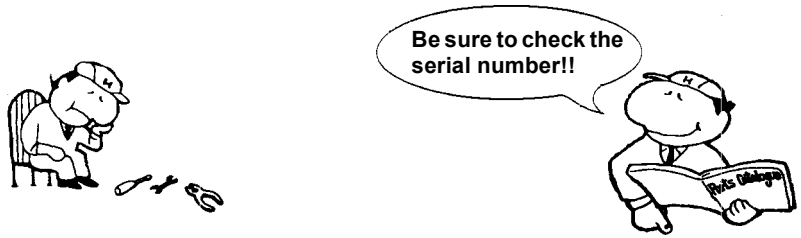

Ref. No.	Part No.	Description	Reqd. QTY BF 9.9D1	BFP 9.9D1	BF 10D1	BFP 10D1	BF 10B1	BFP 10B1	Serial No.
1	12166-ZW9-000	STOPPER, ENGINE SIDE ·····	2	2	2	2	2	2	
2	12210-ZW9-000ZA	HEAD COMP., CYLINDER *NH8*.....DARK GRAY	1	1	1	1	1	1	
3	12251-ZW9-003	GASKET, CYLINDER HEAD ·····	1	1	1	1	1	1	
4	12310-ZW9-000	COVER COMP., HEAD ·····	1	1	1	1	1	1	
5	12312-ZW9-000	PACKING, HEAD COVER ·····	1	1	1	1	1	1	
6	15611-921-000	CAP, OIL ····· (NO GAUGE)	1	1	1	1	1	1	
7	16617-ZW9-000	HOLDER, CABLE (###)·····	1	1	1	1	1	1	-------- -------- SC,SG
	16617-ZW9-010	·····	1	1	1	1	1	1	-------- 1001800 LHC,LHD
			1	1	1	1	1	1	1001801 -------- LHC,LHD

The number has been used from the initial model without revision.

When shown at the left side, it is applicable to the models of No.1001801 and the subsequent numbers.

When shown at the right side, it is applicable to the models up to No.1001800.

- The parts listed with "###" at the end of the parts name have limited supply period (parts not for sale).

Abbreviations used in the parts catalogue

- **The following abbreviations are used in the parts name column.**

A ..... Ampere
A.C. ..... Alternating current
ASSY. .... Assembly
AT. ..... Automatic transmission
C.D.I. ..... Capacitive discharge ignition
COMP. ... Complete
D.C. ..... Direct current
EX. ..... Exhaust
G.F.C.I ... Ground fault circuit interruptor
HEX. ..... Hexagonal
H.S.T. .... Hydrostatic transmission
FR. .....Front
IN. .....Inlet
L (100L) .Link (100 Links)
L. .....Left
MM .....Millimeter
MT. .....Manual Transmission
P.T.O. .....Power take off
R. .....Right
RR. .....Rear
STD. .....Standard
T (22T) ...Tooth (22 Teeth)
V .....Volt
W .....Watt

How to check the part block and serial numbers

Part block	Engine parts E-2~	Carburetor parts E-14~	Frame parts F-1~
Numbers needed	Stamped engine number	Stamped carburetor identification number	Stamped frame number
Check point	①	②	③

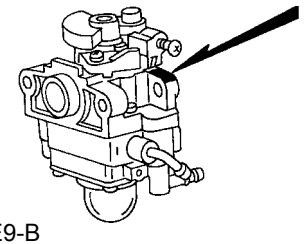

DYE9-B

② **CARBURETOR IDENTIFICATION NUMBER** (WX10)

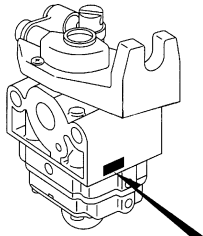

DYE9-E

② **CARBURETOR IDENTIFICATION NUMBER** (WX10K1)

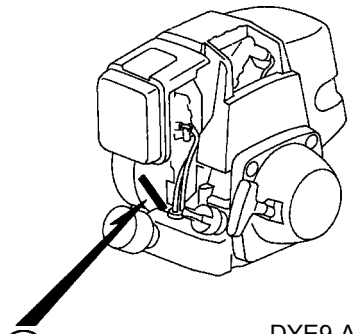

DYE9-A

① **ENGINE SERIAL NUMBER** (WX10)

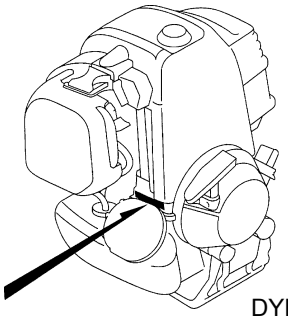

DYE9-D

① **ENGINE SERIAL NUMBER** (WX10K1)

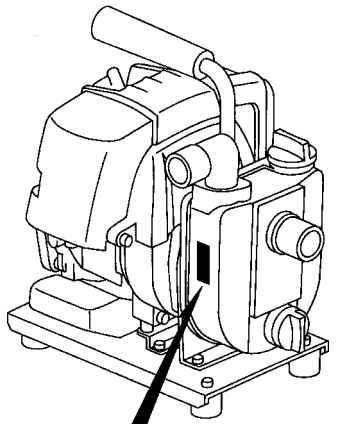

DYE9-C

③ **FRAME SERIAL NUMBER**

Models, parts catalogue codes and applicable serial numbers

• **Models, parts catalogue codes and applicable serial Nos. given in this parts catalogue can be identified as follows.**

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
WX10	C1	C1	GX31	AY3	GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/97/127
		C1/A			GCAG-2100001~	WZBR-1100001~	WYL 74/127
	C2	C2			GCAG-1000001~9999999	WZBR-1000001~9999999	WYL 63/74/74A/97/127
	C3	C3			GCAG-1000001~1379663	WZBR-1000001~1999999	WYL 63/74/74A
	D1	D1		AY5	GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		D1/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A
	D2	D2			GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		D2/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A
	D3	D3			GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		D3/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A
	E1	E1		AY4	GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		E1/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A
	E2	E2			GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		E2/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A
	E3	E3			GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		E3/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A

Model	Type	Parts catalogue type	Engine		Applicable engine serial No.	Applicable frame serial No.	Applicable carburetor identification No.
			Model	Type			
WX10	GG	GG	GX31	AD1	GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 133/133A
		GG/A			GCAG-2100001~	WZBR-1100001~	
	U1	U1		AY6	GCAG-1000001~2099999	WZBR-1000001~1099999	WYL 63/74/74A/75A WYL 133/133A
		U1/A			GCAG-2100001~	WZBR-1100001~	WYL 133/133A
	U2	U2			GCAG-1000001~9999999	WZBR-1000001~9999999	WYL 63/74/74A/75A WYL 133/133A
	U3	U3					
WX10K1	C	C	GX25	AY6	GCAAM-1200001~	WATJ-1000001~	WYB 12A
	D1	D1		AY3			WYB 10
	D2	D2		AY4			WYB 12A
	D3	D3		AY3			WYB 10
	E1	E1		AY4			WYB 12A
	E2	E2		AY3			WYB 10
	GG	GG		AY8			WYB 12A
	U	U		AY7			WYB 21

* Of carburetor identification numbers, only the portions underlined in the example below are used for registration.

WYL 63

Features of each type

- **See the following table for the features of each type.**

Specifications \ Model / Type	WX10												
	C1	C2	C3	D1	D2	D3	E1	E2	E3	GG	U1	U2	U3
Strainer	●	●	●	●	●	●	●	●	●		●	●	●
Hose band	●	●	●	●	●	●	●	●	●		●	●	●
Hose coupling	●	●		●	●		●	●			●	●	
Hose clamp ring	●	●		●	●		●	●			●	●	
suction hose		●	●		●	●		●	●			●	●
Coupler			●			●			●				●

Specifications \ Model / Type	WX10K1							
	C	D1	D2	D3	E1	E2	GG	U
Strainer	●	●	●	●	●	●		●
Hose band	●	●	●	●	●	●		●
Hose coupling	●	●	●		●	●		●
Hose clamp ring	●	●	●		●	●		●
suction hose			●	●		●		
Coupler				●				

Fuel hose, general purpose hoses and vinyl hose

- The standard part fuel hose, general purpose hose and vinyl hose may be substituted by the coiled bulk part.
- When ordering the standard part fuel hose, general purpose hose and vinyl hose use the bulk part number written in the parts catalog in brackets ( ) underneath the part name.
- When exchanging the hose, cut and use at the specified length as mentioned in the part name.
  (For the method of cutting the bulk part, and method of filling out orders etc., please refer to the instructions issued with the bulk part.)

Bulk part number of fuel hose, general purpose hose and vinyl hose.

Example: 9 5 0 0 1 - 7 5 0 0 1 - 5 0 M

Bulk part number:
Refers to the bulk part.

Marking code (fuel hose and general purpose hose)
Change code (Vinyl hose)
Indicates number mark or change sequence, however, the code for the bulk part must be strictly 0 (zero).

Types of code:

• Fuel hose	2: Red outside braid (3 mm inside dia. only)	• General hose	1: Ash gray	• Vinyl hose	1: Clear
	5: Black inside braid		2: Ash gray		2: Black
	3: Red (3 mm inside dia. only)		3: Black		3: Light red
	4: Ash gray with red stripe (3 mm inside dia. only)		5: Black		6: Light red
	6: Black				7: Pale black

Lengths:
001: 1 m (standard)
003: 3 m
008: 8 m
} Application or specification of some parts is not settled.

I.D code: (fuel hose and general purpose hose)

30: 3.0 mm	50: 5.0 mm	70: 7.0 mm	11: 11 mm	12: 12 (outside dia. 17) mm
35: 3.5 mm	55: 5.3 mm, 5.5 mm	75: 7.3 mm, 7.5 mm	91: 12 (outside dia. 15) mm	14: 14 mm
45: 4.5 mm	65: 6.5 mm	80: 8.0 mm	92: 12 (outside dia. 16) mm	17: 17 mm

ID./OD. code: (vinyl hose)

01: ID. 2.9, OD. 6.8 mm	12: ID. 5.0, OD. 7.0 mm	21: ID. 8.0, OD. 9.0 mm	37: ID. 11.0, OD. 15.0 mm	50: ID. 16.0, OD. 19.0 mm
03: ID. 3.0, OD. 6.0 mm	10: ID. 5.0, OD. 8.0 mm	23: ID. 8.0, OD. 12.0 mm	38: ID. 12.0, OD. 13.0 mm	55: ID. 17.5, OD. 20.5 mm
05: ID. 3.5, OD. 6.5 mm	11: ID. 5.0, OD. 9.0 mm	25: ID. 9.0, OD. 11.0 mm	39: ID. 12.0, OD. 14.0 mm	60: ID. 22.0, OD. 27.0 mm
07: ID. 4.0, OD. 7.0 mm	14: ID. 6.0, OD. 9.0 mm	27: ID. 9.0, OD. 13.0 mm	40: ID. 12.0, OD. 16.0 mm	
08: ID. 4.5, OD. 6.5 mm	17: ID. 7.0, OD. 9.0 mm	33: ID. 10.0, OD. 14.0 mm	43: ID. 13.0, OD. 15.0 mm	
09: ID. 4.5, OD. 8.0 mm	19: ID. 7.0, OD. 11.0 mm	36: ID. 11.0, OD. 13.0 mm	45: ID. 14.0, OD. 18.0 mm	

Hose type:
1: Fuel hose
3: Vinyl hose
5: General hose

◎ **CAUTION: It is DANGEROUS to confuse the fuel hose with the general purpose hose or vinyl hose.**
Never use a general purpose hose or vinyl hose in place of a fuel hose or vice versa. Always use the correct bulk part in the parts catalogue, according to the service manual or the instructions issued with the bulk part.

FLAT RATE SERVICE TIME

Flat rate service time (FRT) means the standard time required to service a product, which is listed in this manual to help the dealers control the actual working process and calculate the service charge by using it as a guide.

FRT setting system

- Net service time
  - Removal, Disassembly/reassembly, Installation
  - Inspection, Measurement, Adjustment, Confirmation
  - Diagnosis/troubleshooting (Electric system)
  - Completion inspection
- Float time
  - Preparation (Process check, Confirmation arrangement for necessary tools)
  - Related work (Transfer of products)

* Float time is set by multiplying the net service time by a given coefficient.

Editorial style

The service items shown in the text are listed with the exchange work time for the repair sales parts as the subject. Other representative service items not using repair parts (removal/ installation, adjustment, inspection/measuring, and other work) are listed collectively in the list in the preface, classified according to the work.

FRT setting standard

- Decimal system (in unit of 0.1) is adopted to set FRT as it is convenient to calculate the wage.
  Example: (0.1)→6 minutes, (0.2)→12 minutes
  [Labor cost per hour] x [FRT] = [Wage]
- FRT is set with a hand tool.
- Service items and FRT can be subject to change depending on development of tools and service equipment and improvement in service procedure.

Work procedure

- As the work procedure is set with the work time according to the method in the separate Service Manual, refer to this Manual as required.
- Work methods permitting servicing in the shortest time still permitting assurance of safe work and product warranty are used for the setting of service items not listed in the Service Manual.
- Work basically is to be performed by one person, and when two or more people are required, setting is done as the total time for the number of people.
- The set value for the technological level of the workers uses a person with three years of experience in the repair of Honda products as the standard.
- Special tools and service equipment used to set FRT are those specified or recommended in Service Manual.

Service item whose FRT is not presented

- Accessories and service parts that are not listed to use in this manual.
- Locations with little aging deterioration or breakage during normal use.
- Service work that can be finished by one touch.
- Service work that is seldom done (i.e. extremely small causes of trouble and service frequency).
- Products and parts whose location for installation differs according to its status of use and application.

* When FRT is not presented, please calculate wages based on appropriate actual work time.

Operation not included of FRT

- Oil and coolant water drainig, Waiting time for warming up operation and etc..
- Additional operation that involves removal/installation of standard exterior equipment.
- Indirect time spent for service by visiting the customer, trade-in, and delivery.
- Indirect time required for ordering and delivery of parts.
- Cost for grease, adhesive agent, etc. used for service work.

Explanation of FRT by using an example
(The example may differ from the actual presented items)

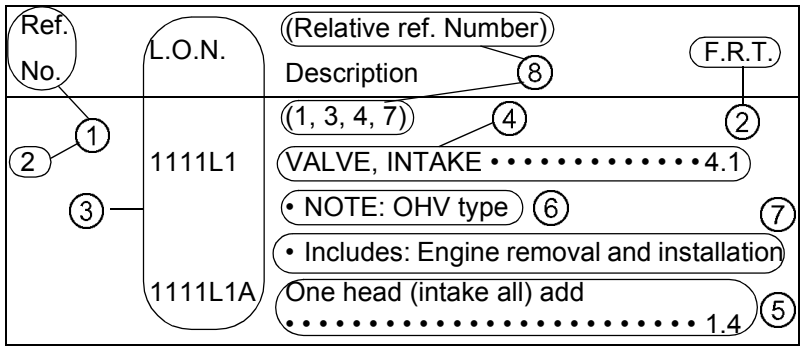

①Reference No. of the illustration of part that shows location of the replacement work.

②FRT is an abbreviation of Flat Rate Time indicating the standard service time required for the replacement.

③LON is an abbreviation of Labor Operation Number, and it is a classification of the service items by the work unit code.

The same operation code is used regardless of the models.

Standard operation is indicated with 6 digits code, and additional operation is indicated with 7 digits code.

④Indicating the intake valve replacement and FRT4.1.

⑤Indicating FRT1.4 that will be added when additional operation (whole intake side of one cylinder head) is done in association with intake valve replacement.

⑥Indicating work condition or application condition of the service item.

⑦Indicating work contents that are included in the service item.

⑧Indicating a reference No. whose operation and time are the same as FRT4.1 for the intake valve.

(The application range is limited to the service items without an LON setting within a same block.)

How to refer to the service item by using the sample
(intake valve replacement)

Open to the page of the block where the intake valve's spare part illustration is shown.

↓

Look for the intake valve illustration, and refer to the service item and FRT that agree with the reference No.

Indication mark for the listing of service items that continues to the following page

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	**1111L1**	**VALVE, INTAKE** • • • • • • • • • • • •	**4.1**
	•	•	•
	•	•	•
+			

Mark indicated at the last line.

Indication of the block with no setting of FRT

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION • • • • • • • • • • • • • • • • • •			

• LON code system

1	11	1	L1	A
a	b	c	d	e

a) Category code..... Engine

b) Location/function code ..... Engine upper

c) Operation code..... Replace

d) Operation sequence number (Unit code can be shown with alphabet)
..... Intake valve
(No regular rule of code)

e) Additional code ..... One head (intake all)
(No regular rule of code)

1	11	1	L1	A
a		c		

a) Category codes and classification

Code	Category
1	Engine
2	Power drive
3	Fuel & Exhaust
4	Frame & Body
5	Steering
6	Electrical
7	Axle & Brake
8	Control system
9	-
0	Attachments

c) Operation codes and classification

Code	Operation category
1	Replace, Removal/Installation, Change
2	Overhaul
3	Adjust, Rotation
4	(Paint-related work: Top-coat)
5	Test, Inspect/diagnose, Measurment
6	(Overhaul-related work: Rebore)
7	(Overhaul-related work: Reseal)
8	(Resurface)
9	(Paint-related work: Refinish)
0	Repair, Cleaning, Air bleeding

Major service items without using spare parts
(1) Removal/Installation, (2) Adjustment, (3) Inspection/ Measurement, (4) Overhaul, (5) Other work

E: Engine, T: Transmission, D: Drive system, B: Body and related parts

(1) Removal/Installation

Set with the parts configuration in the status of being removed from the product.

	LON	DESCRIPTION	FRT
E	1001A2	**ENGINE-REMOVAL/INSTALLATION**	0.3

(2) Adjustment

	LON	DESCRIPTION	FRT
E	1113A1	**VALVE CLEARANCE-ADJUSTMENT** NOTE: For 1 product	0.5
	3113A2	**CARBURETOR IDLE-ADJUSTMENT**	0.2

(3) Inspection, Measurement, Cleaning

	LON	DESCRIPTION	FRT
E	1105A0	**ENGINE OIL-INSPECTION**	0.1
	3120A0	**AIR CLEANER-CLEANING** INCLUDES: Air cleaner-inspection	0.2
	6140A0	**SPARK PLUG-CLEANING** INCLUDES: Spark plug gap-adjustment NOTE: For 1 product	0.2
	6145A0	**SPARK-TEST** NOTE: All cylinders	0.1

(4) Overhaul

Work condition: The required Measurements, inspections, adjustments, and cleaning/washing of each part are performed, including the main body removal/installation work and the replacement of defective parts.

	LON	DESCRIPTION	FRT
E	3112A0	**CARBURETOR-OVERHAUL** INCLUDES: All necessary adjustment	0.4

(5) Other work

	LON	DESCRIPTION	FRT
E	1101E1	**ENGINE OIL-CHANGE** INCLUDES: Engine oil-inspection	0.1

E-2 D 1

CRANKCASE SET(WX10)

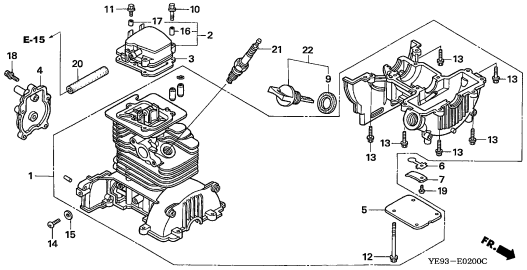

E-2-1 D 3

CRANKCASE SET(WX10K1)

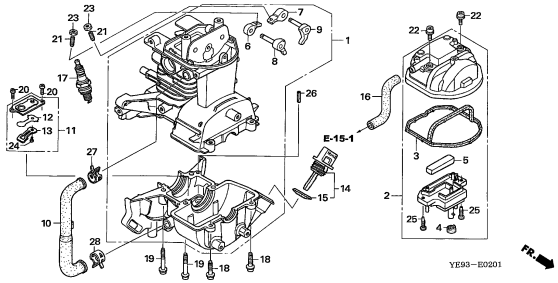

E-7 D 5

PISTON/CRANKSHAFT(WX10)

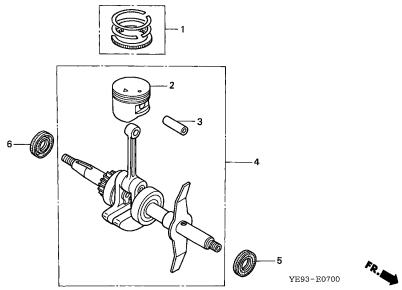

E-7-1 D 6

PISTON/CRANKSHAFT(WX10K1)

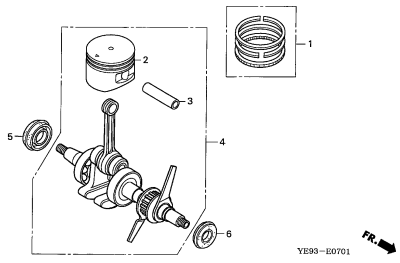

E-9 D 7

CAMSHAFT(WX10)

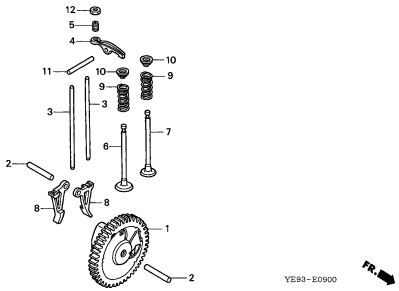

E-10 D 9

CAM PULLEY(WX10K1)

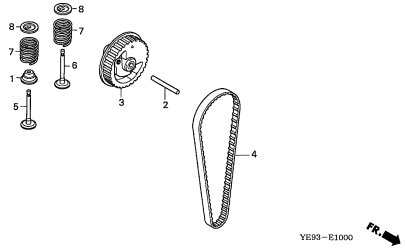

E-11 D10

RECOIL STARTER(WX10)

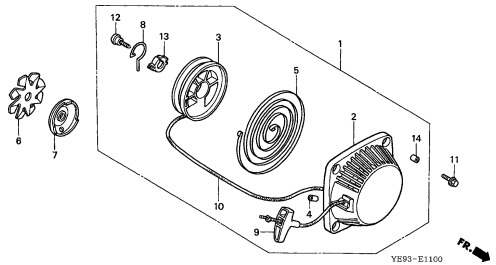

E-11-1 D11

RECOIL STARTER(WX10K1)

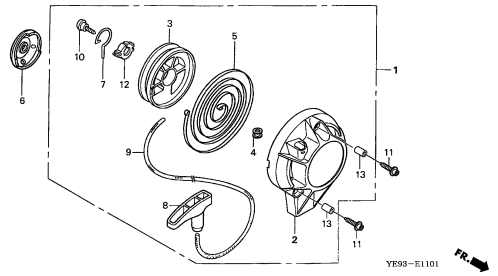

E-12 D12

FAN COVER(WX10)

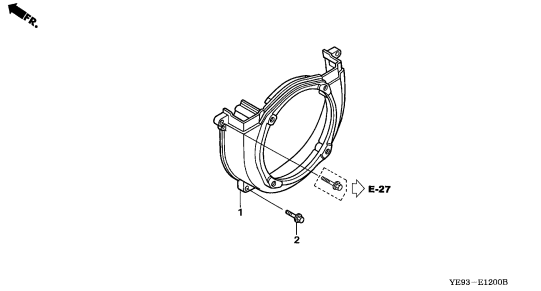

2

E-12-1 D13

FAN COVER/CLUTCH(WX10K1)

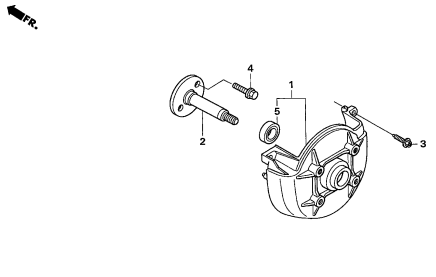

E-14 D14

CARBURETOR(WX10)

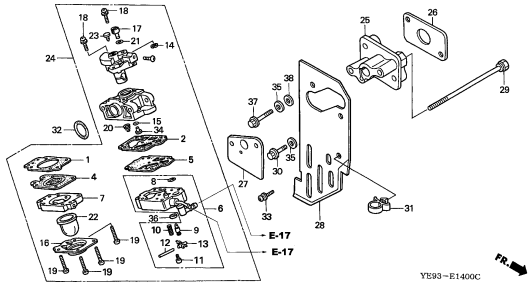

E-14-1 E 1

CARBURETOR(WX10K1)

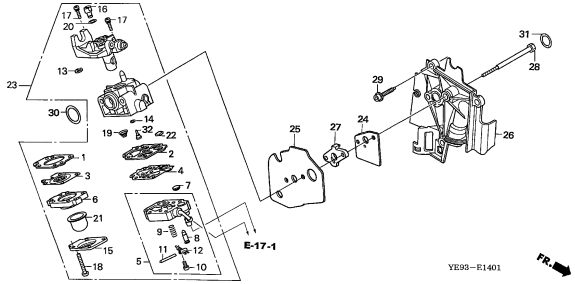

E-15 E 3

AIR CLEANER(WX10)

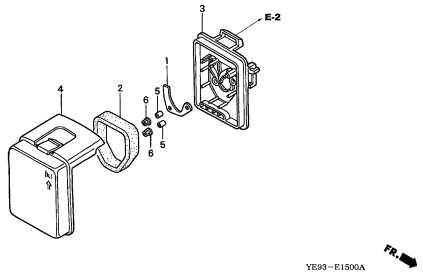

E-15-1 E 4

AIR CLEANER(WX10K1)

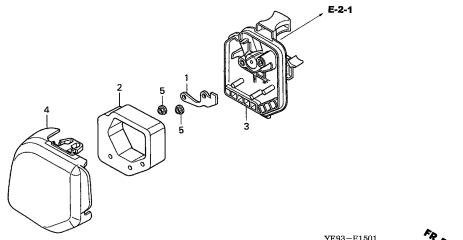

E-16 E 5

MUFFLER(WX10)

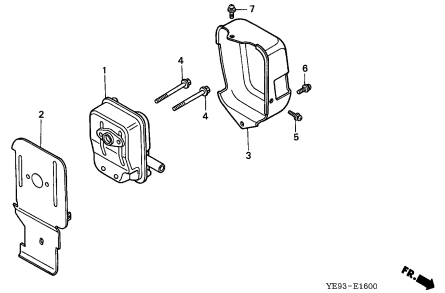

E-16-1 E 6

MUFFLER(WX10K1)

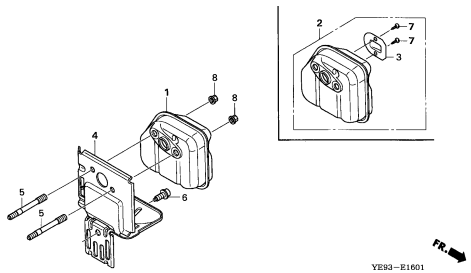

E-17 E 7

FUEL TANK(WX10)

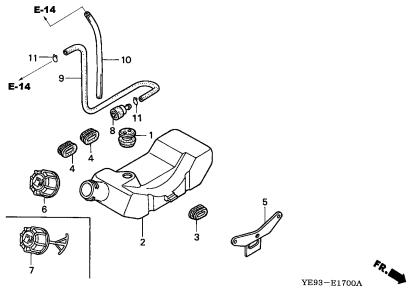

E-17-1 E 8

FUEL TANK(WX10K1)

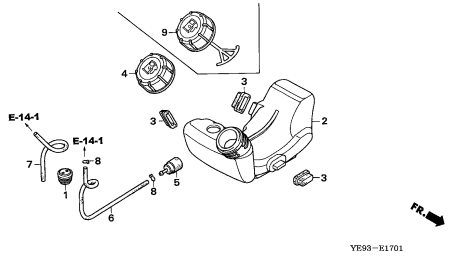

2

E-19 E 9

FLYWHEEL/IGNITION COIL(WX10)

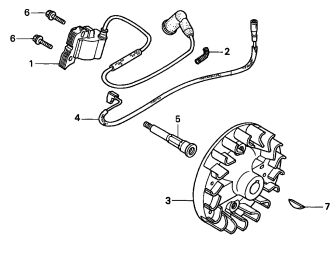

E-19-1 E10

FLYWHEEL/IGNITION COIL(WX10K1)

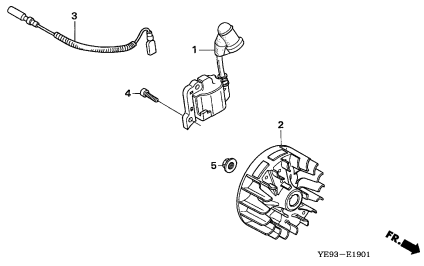

E-22 E11

CONTROL(WX10)

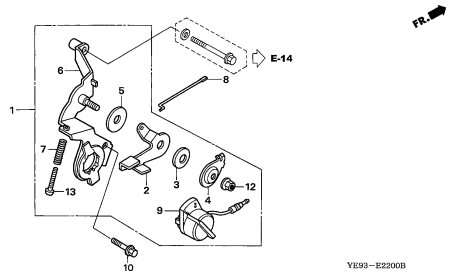

E-22-1 E12

CONTROL(WX10K1)

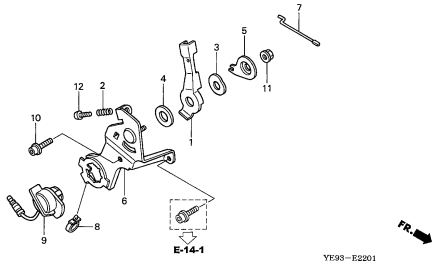

E-27 E13

TOP COVER(WX10)

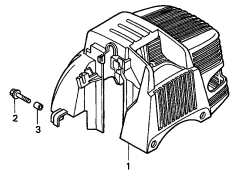

E-27-1 E14

TOP COVER(WX10K1)

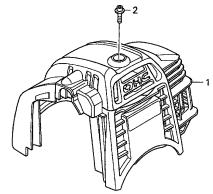

E-28 E15

LABEL(WX10)

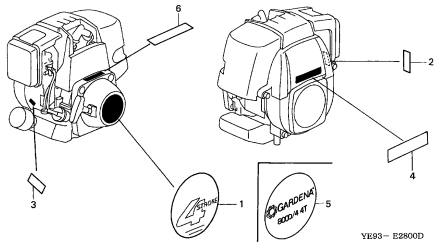

E-28-1 E16

LABEL(WX10K1)

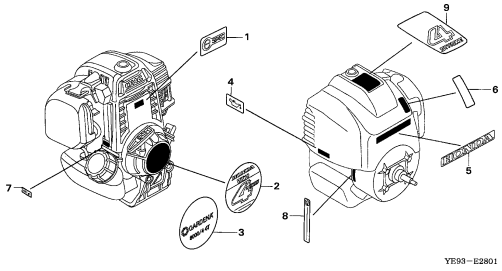

E-29 F 1

TOOL(WX10)

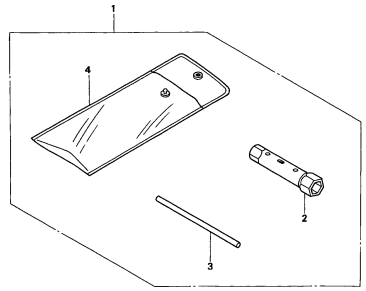

2

FRAME GROUP

C 2

F-1 G 1

CASING(WX10)

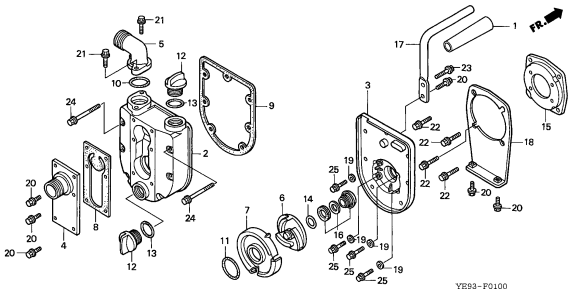

F-1-1 G 3

CASING(WX10K1)

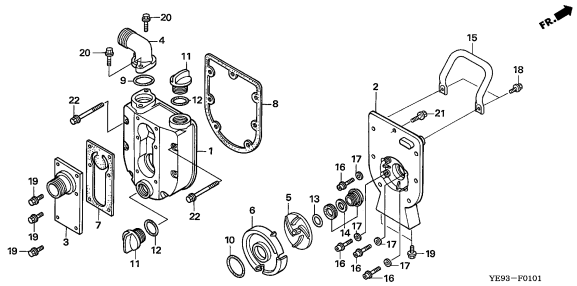

F-2 G 4

STRAINER/HOSE

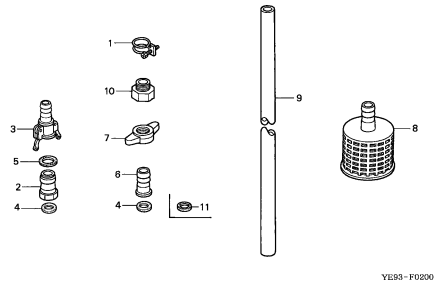

F-3 G 5

FRAME

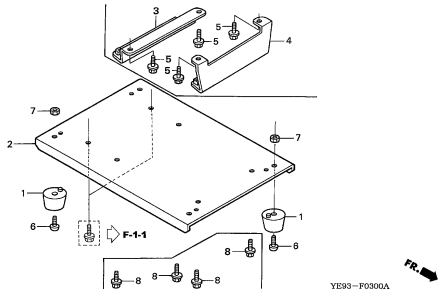

F-4 G 6

LABEL

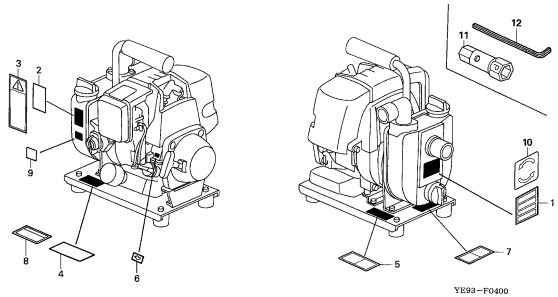

3

E-2 CRANKCASE SET(WX10)

D 1

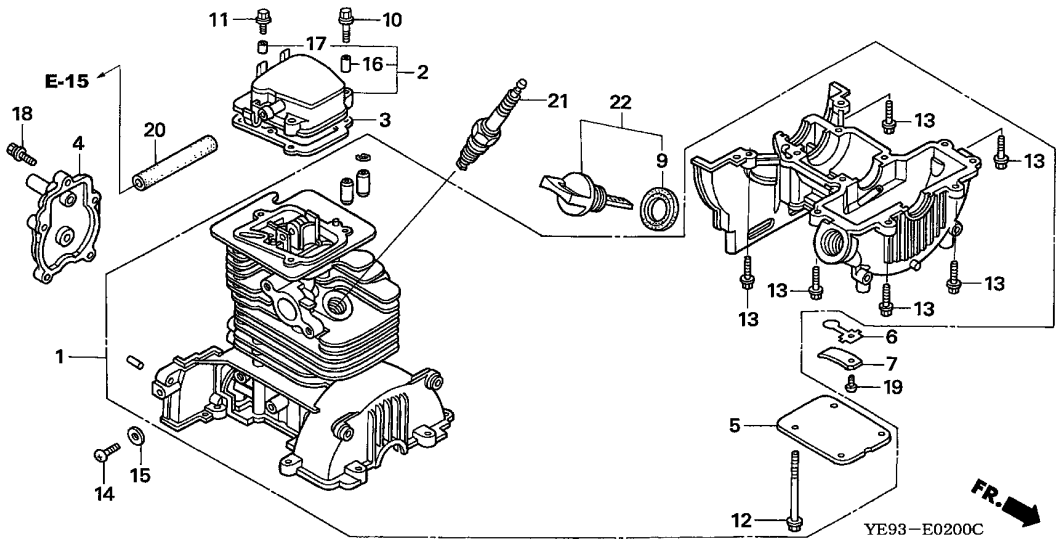

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101B7	CRANKCASE	1.8
2		(3)	
	1111D5	COVER, CYLINDER HEAD AND/OR PACKING, HEAD COVER	0.3
4	1111D2	COVER, CAMSHAFT	0.6
5	1171A0	COVER, OIL OUTLET VALVE	0.3
6	1171A8	VALVE, OIL OUTLET	0.4
20	1111K5	TUBE, BREATHER	0.2
21	6141C1	PLUG, SPARK	0.1
		.INCLUDES: Spark plug check	

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	11010-ZM5-000	CRANKCASE SET	1	-	-------- --------	C3
			1	-	-------- 1193155	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	11010-ZM5-020		1	-	1193156 1533766	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	11010-ZM5-030		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1533767 --------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
2	12310-ZM3-010	COVER COMP., HEAD	1	-	-------- 1140427	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	12310-ZM3-003		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1140428 --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
3	12312-ZM3-020	PACKING, HEAD COVER	1	-		
4	14121-ZM5-000	COVER, CAMSHAFT	1	-	-------- 1193155	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	14121-ZM5-010		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1193156 --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
5	15511-ZM3-000	COVER, OIL OUTLET VALVE	1	-		
6	15571-ZM3-003	VALVE, OIL OUTLET	1	-		
7	15572-ZM3-000	PLATE, STOPPER	1	-		
9	15625-ZE1-003	PACKING, OIL FILLER CAP	1	-		
10	90001-ZM3-000	BOLT, FLANGE, 5X22	2	-		
11	90002-ZM3-000	BOLT, FLANGE, 5X14	1	-		
12	90003-ZM3-000	BOLT, FLANGE, 5X55	4	-		
13	90005-ZM3-000	BOLT, FLANGE, 5X18	6	-		
14	90011-ZM3-000	SCREW, PAN, 6X8	1	-		
15	90481-GW3-000	WASHER, SEALING, 6.5MM	1	-		
16	91501-ZM3-010	COLLAR, HEAD COVER	2	-		
17	91506-ZM3-000	COLLAR A, HEAD COVER	1	-		
18	93401-04016-00	BOLT-WASHER, 4X16	5	-		
19	93500-03005-0A	SCREW, PAN, 3X5	1	-		

CRANKCASE SET(WX10)

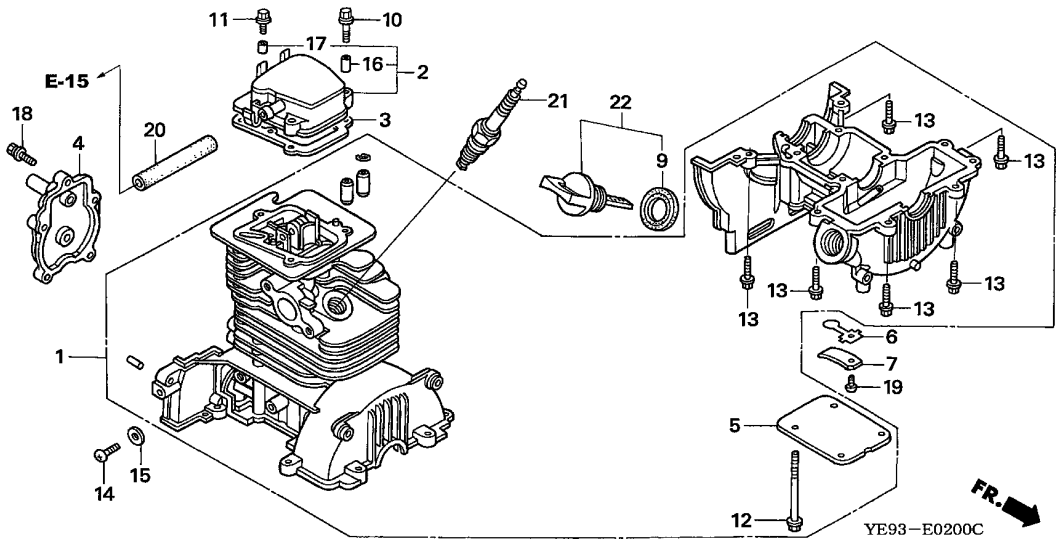

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
20	95005-70068-30	TUBE, 7X68(95005-70001-30M) -	1	-		
21	98056-55757	PLUG, SPARK (U16FSR-UB) -----	1	-		
	98056-55777	PLUG, SPARK (CR5HSB) --------	1	-		
22	15600-ZM3-003	CAP ASSY., OIL FILLER -------	1	-		

E-2-1 CRANKCASE SET(WX10K1)

D 3

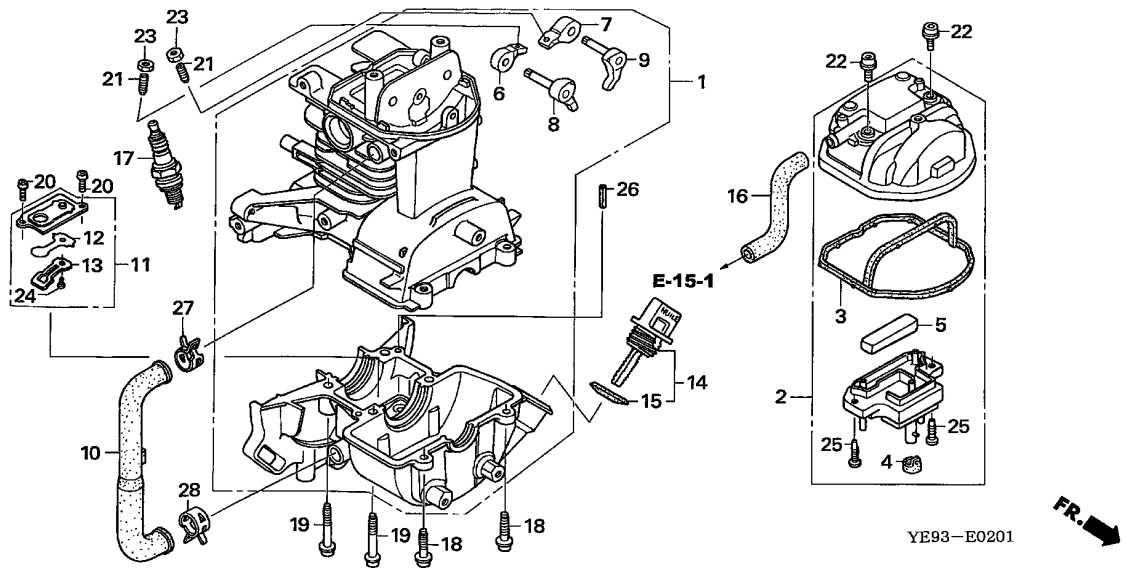

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1101B7	CRANKCASE ·····	1.8
2	1111D5	COVER, CYLINDER HEAD AND/OR PACKING, HEAD COVER ·····	0.2
6	1111A2	ARM, ROCKER :INTAKE ····· .INCLUDES: Valve clearance adjustment	0.9
7	1111A1	ARM, ROCKER :EXHAUST ····· .INCLUDES: Valve clearance adjustment	0.9
8	1111L9	LIFTER, VALVE :INTAKE ····· .INCLUDES: Valve clearance adjustment	0.9
9	1111M0	LIFTER, VALVE :EXHAUST ····· .INCLUDES: Valve clearance adjustment	0.9
10	1171A4	TUBE, OIL ·····	0.4
11	1171A2	PLATE, OIL OUTLET VALVE ·····	1.1
16	1111K5	TUBE, BREATHER ·····	0.2
17	6141C1	PLUG, SPARK ····· .INCLUDES: Spark plug check	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	10100-ZOH-425	CRANKCASE SET ·····	-	1		
2	12310-ZOH-010	COVER, CYLINDER HEAD ·····	-	1		
3	12312-ZOH-300	SEAL, HEAD COVER ·····	-	1		
4	12314-ZOH-300	GROMMET, HEAD COVER ·····	-	1		
5	12367-ZOH-000	FILTER, BREATHER ·····	-	1		
6	14431-ZOH-003	ARM, IN. VALVE ROCKER ·····	-	1		
7	14441-ZOH-003	ARM, EX. VALVE ROCKER ·····	-	1		
8	14730-ZOH-000	LIFTER COMP., IN. VALVE ·····	-	1		
9	14740-ZOH-000	LIFTER COMP., EX. VALVE ·····	-	1		
10	15422-ZOH-000	TUBE, OIL ·····	-	1		
11	15510-ZOH-000	PLATE ASSY., OIL OUTLET VALVE	-	1		
12	15571-ZM3-003	VALVE, OIL OUTLET ·····	-	1		
13	15572-ZOH-000	PLATE, STOPPER ·····	-	1		
14	15600-ZFO-003	CAP ASSY., OIL FILLER ·····	-	1		
15	15625-ZE1-003	PACKING, OIL FILLER CAP ·····	-	1		
16	15721-ZOH-800	TUBE, BREATHER ·····	-	1		
17	31914-ZOH-003	PLUG, SPARK (CMR4H)(NGK) ····	-	(1)		
	31916-ZOH-003	PLUG, SPARK (CMR6H)(NGK) ····	-	(1)		
	31915-ZOH-003	PLUG, SPARK (CMR5H)(NGK) ····	-	1		
18	90009-ZOH-003	BOLT, SOCKET, 5X20 ·····	-	2		
19	90010-ZOH-003	BOLT, SOCKET, 5X30 ·····	-	4		
20	90013-ZOH-004	SCREW, PAN, 4X8 ·····	-	2		
21	90017-ZOH-000	SCREW, TAPPET ADJUSTING ·····	-	2		
22	90019-ZOH-003	BOLT, SOCKET, 5X12 ·····	-	2		
23	90206-ZM3-000	NUT, TAPPET ADJUSTING ·····	-	2		

E-2-1 CRANKCASE SET(WX10K1)

D 4

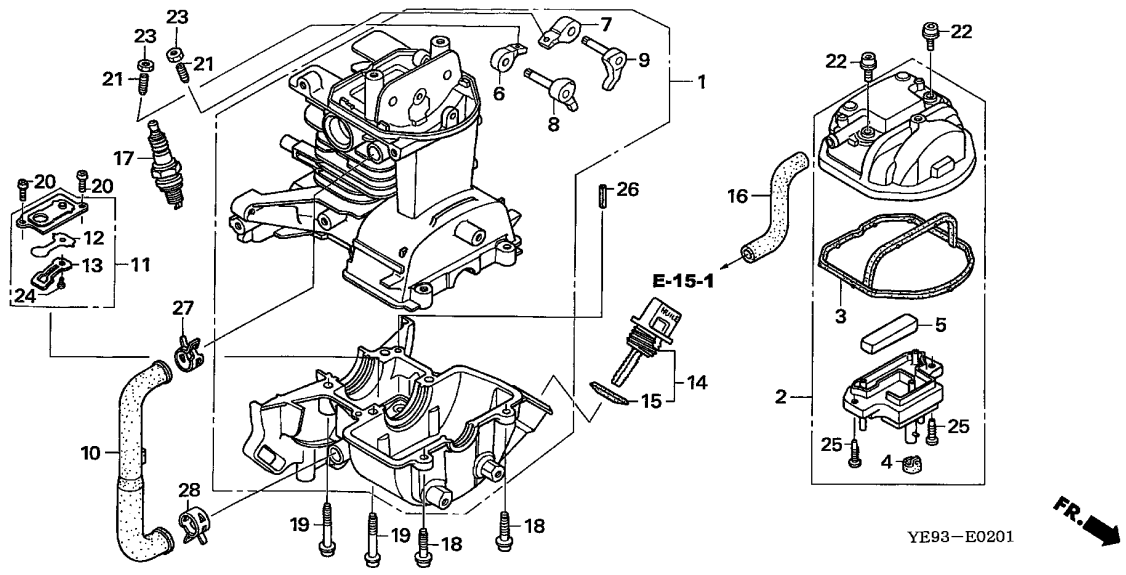

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
24	93500-03005-0A	SCREW, PAN, 3X5	-	1		
25	93901-34320	SCREW, TAPPING, 4X12	-	2		
26	94305-40102	PIN, SPRING, 4X10	-	1		
27	95002-41200-08	CLAMP, TUBE (D12)	-	1		
28	95002-41300-04	CLAMP, TUBE (D13)	-	1		

PISTON/CRANKSHAFT(WX10)

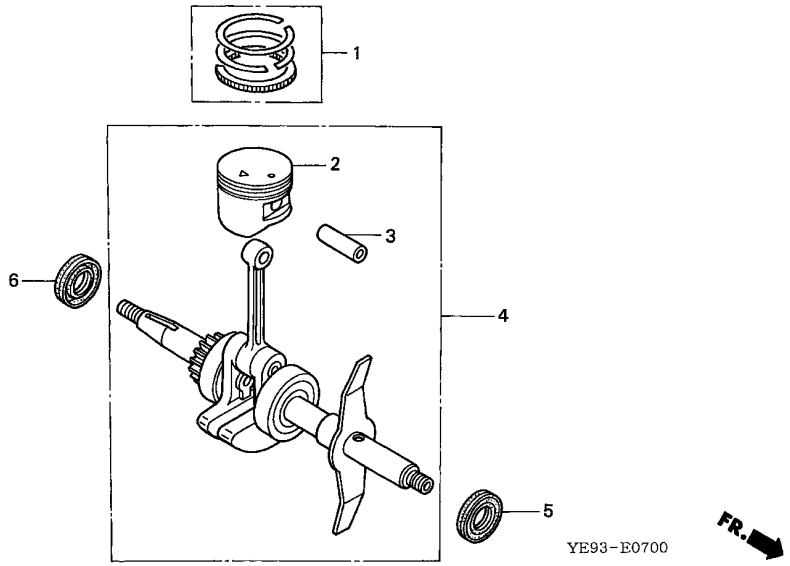

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111J4	RING SET, PISTON ·····	1.5
	1111J4F	.Replace 1 piston and/or pin and/or rod, connecting and/or bearing add ·····	0.1
4	1101F0	CRANKSHAFT ·····	1.4
5	1101E4	OIL SEAL, CRANKSHAFT :FRONT ··	0.9
6	1101E5	OIL SEAL, CRANKSHAFT :REAR ···	0.9

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	13010-ZM5-000	RING SET, PISTON ·····	1	-		
2	13101-ZM5-020	PISTON ·····	1	-	-------- --------	C3
			1	-	-------- 1382005	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	13101-ZM5-030	·····	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1382006 --------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
3	13111-ZM5-000	PIN, PISTON ·····	1	-		
4	13310-ZM5-010	CRANKSHAFT COMP. ·····	1	-	-------- --------	C3
			1	-	-------- 1209678	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	13310-ZM5-030	·····	1	-	1209679 1382005	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	13310-ZM5-040	·····	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1382006 --------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
5	91213-ZM3-003	OIL SEAL, 12X25X6 ·····	1	-		
6	91213-ZM5-800	OIL SEAL, 15X25X6 ·····	1	-	-------- --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,GG,U1,U2,U3
	91214-ZM3-003	·····	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A

E-7-1 PISTON/CRANKSHAFT(WX10K1)

D 6

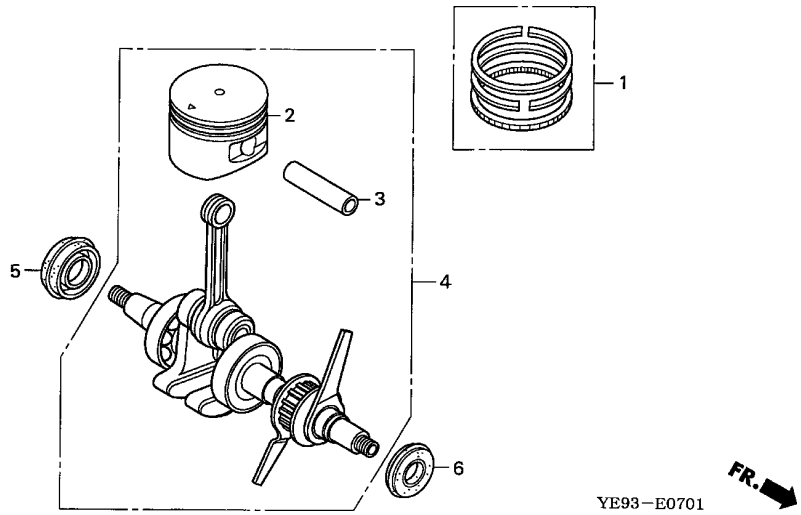

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2,3)	
	1111J4	RING SET, PISTON ·····	1.6
	1111J4F	.Replace 1 piston and/or pin and/or rod, connecting and/or bearing add ·····	0.1
4	1101F0	CRANKSHAFT ·····	1.2
5	1101E5	OIL SEAL, CRANKSHAFT :REAR ···	1.5
6	1101E4	OIL SEAL, CRANKSHAFT :FRONT ··	1.5

Ref. No.	Part No.	Description	Reqd. WX 10	Reqd. QTY WX 10 K1	Serial No.	Parts catalogue code
1	13010-Z0H-000	RING SET, PISTON ·····	-	1		
2	13101-Z0H-000	PISTON ·····	-	1		
3	13111-Z0H-000	PIN, PISTON ·····	-	1		
4	13310-Z0H-801	CRANKSHAFT COMP. ·····	-	1		
5	91211-Z0H-003	OIL SEAL, 12X24X5 ·····	-	1		
6	91212-Z0H-003	OIL SEAL, 10X20X5 ·····	-	1		

E-9 CAMSHAFT(WX10)

D 7

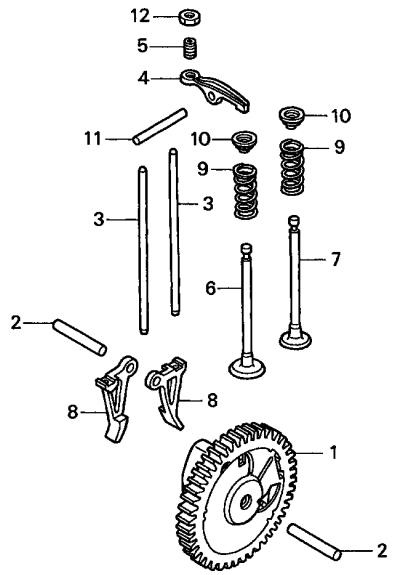

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111C2	CAMSHAFT ·····	0.6
		.INCLUDES: Valve clearance adjustment	
3	1111L6	ROD, PUSH :INTAKE ·····	0.4
		.INCLUDES: Valve clearance adjustment	
	1111L6A	.Replace exhaust push rod add	0.1
	1111L7	ROD, PUSH :EXHAUST ·····	0.4
		.INCLUDES: Valve clearance adjustment	
	1111L7A	.Replace intake push rod add ·	0.1
4	1111A2	ARM, ROCKER :INTAKE ·····	0.5
		.INCLUDES: Valve clearance adjustment	
	1111A2A	.Replace exhaust rocker arm add ·····	0.1
	1111A1	ARM, ROCKER :EXHAUST ·····	0.5
		.INCLUDES: Valve clearance adjustment	
	1111A1A	.Replace intake rocker arm add	0.1
6	1111L1	VALVE, INTAKE ·····	1.7
		.INCLUDES: Valve clearance adjustment and reface	
	1111L1E	.Replace intake and exhaust all add ·····	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	14100-ZM3-010	CAMSHAFT ASSY. ·····	1	-		
2	14126-ZM3-000	ROLLER (5X23.8) ·····	2	-		
3	14410-ZM3-000	ROD, PUSH ·····	2	-		
4	14431-ZM3-000	ARM, VALVE ROCKER ·····	2	-		
5	14451-ZM3-000	PIVOT, ROCKER ARM ·····	2	-		
6	14711-ZM5-000	VALVE, IN. ·····	1	-		
7	14721-ZM3-000	VALVE, EX. ·····	1	-		
8	14731-ZM3-003	LIFTER, VALVE ·····	2	-		
9	14751-ZM3-000	SPRING, VALVE ·····	2	-	-------- --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,GG,U1,U2,U3
	14751-ZM3-010	·····	2	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
10	14771-ZM3-010	RETAINER, VALVE SPRING ·····	2	-		
11	41313-PL3-000	ROLLER, 4X28 ·····	1	-		
12	90206-ZM3-000	NUT, TAPPET ADJUSTING ·····	2	-		

2

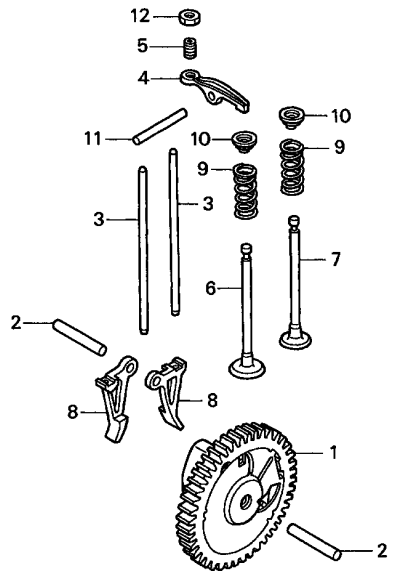

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
7	1111LO	VALVE, EXHAUST ----------	1.7
		.INCLUDES: Valve clearance adjustment and reface	
	1111LOE	.Replace intake and exhaust all add ----------	0.1
8	1111L9	LIFTER, VALVE :INTAKE --------	0.5
		.NOTE: Same time for two units	
	1111MO	LIFTER, VALVE :EXHAUST -------	0.5
		.NOTE: Same time for two units	

CAM PULLEY(WX10K1)

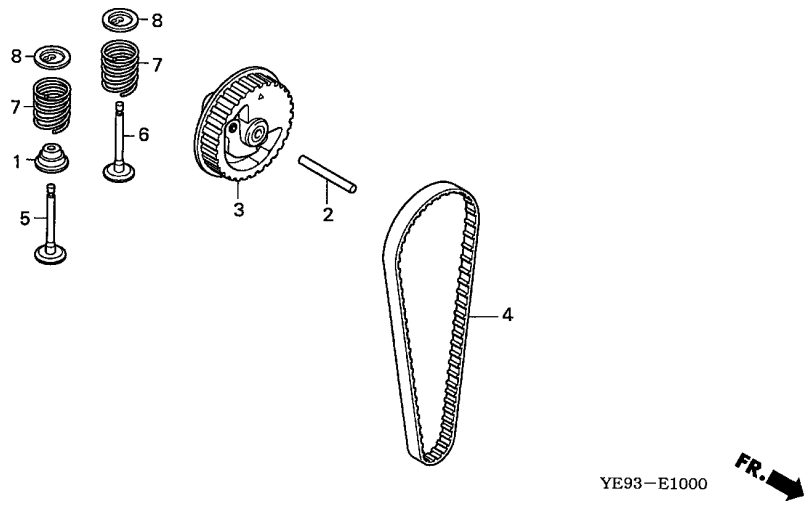

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111K2	SEAL, INTAKE VALVE STEM ------	1.6
		.INCLUDES: Valve clearance adjustment	
3	1111N5	PULLEY, CAMSHAFT ------------	0.4
		.INCLUDES: Valve clearance adjustment	
4	1111N6	BELT, TIMING ----------------	1.5
5	1111L1	VALVE, INTAKE ---------------	1.6
		.INCLUDES: Valve clearance adjustment and reface	
	1111L1E	.Replace intake and exhaust all add -------------------	0.1
6	1111LO	VALVE, EXHAUST --------------	1.6
		.INCLUDES: Valve clearance adjustment and reface	
	1111LOE	.Replace intake and exhaust all add -------------------	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	12209-ZOH-003	SEAL, VALVE STEM ------------	-	1		
2	14126-ZOH-003	ROLLER, 4X29.8 --------------	-	1		
3	14320-ZOH-010	PULLEY COMP., CAM -----------	-	1		
4	14400-ZOH-003	BELT, TIMING (71ZU6 G-300) --	-	1		
5	14711-ZOH-000	VALVE, IN. ------------------	-	1		
6	14721-ZOH-000	VALVE, EX. ------------------	-	1		
7	14751-ZOH-000	SPRING, VALVE ---------------	-	2		
8	14771-ZOH-000	RETAINER, VALVE SPRING ------	-	2		

RECOIL STARTER(WX10)

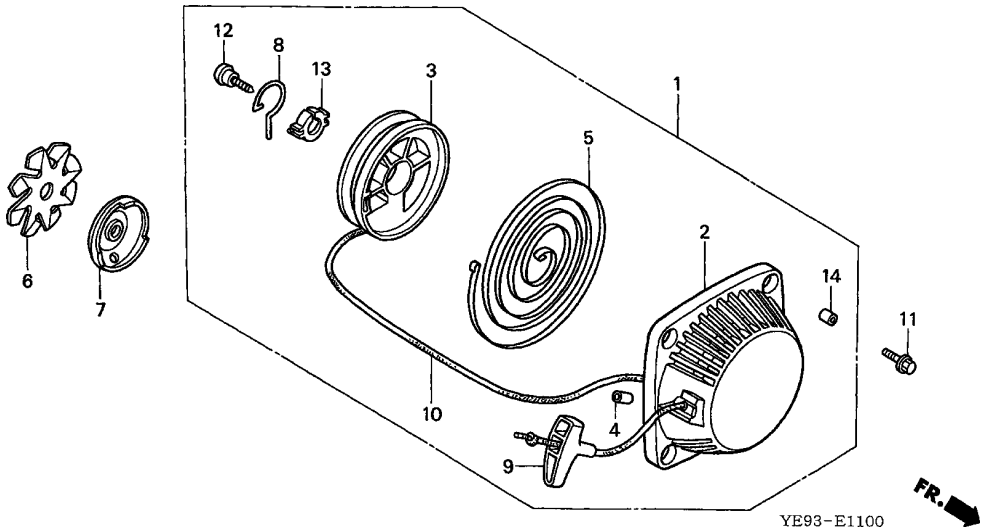

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL ----------	0.1
3	1121B1	REEL, RECOIL STARTER ----------	0.3
5	1121B7	SPRING, RECOIL STARTER RETURN	0.3
7	1121A9	PULLEY, RECOIL STARTER -------	0.2
8	1121D3	ARM, RECOIL STARTER SWING ----	0.2
10	1121B3	ROPE, RECOIL STARTER ----------	0.3

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	28400-ZM3-003ZA	STARTER ASSY., RECOIL *NH1*.....BLACK	1	-		
2	28414-ZM3-003	CASE, RECOIL STARTER --------	1	-		
3	28421-ZM3-003	REEL, RECOIL STARTER --------	1	-		
4	28433-ZM3-003	GUIDE, ROPE ----------	1	-		
5	28442-ZM3-003	SPRING, RECOIL STARTER ------	1	-		
6	28447-ZM3-000	FAN, RATCHET ----------	1	-		
7	28451-ZM3-003	PULLEY, RECOIL STARTER ------	1	-		
8	28459-ZM3-003	ARM, SWING ----------	1	-		
9	28461-ZM3-003	KNOB, RECOIL STARTER --------	1	-		
10	28462-ZM3-003	ROPE, RECOIL STARTER --------	1	-		
11	90005-ZM3-000	BOLT, FLANGE, 5X18 ----------	4	-		
12	90012-ZM3-003	SCREW, SETTING ----------	1	-		
13	91504-ZM3-003	COLLAR ----------	1	-		
14	91505-ZM3-003	COLLAR ----------	4	-		

E-11-1 RECOIL STARTER(WX10K1)

D11

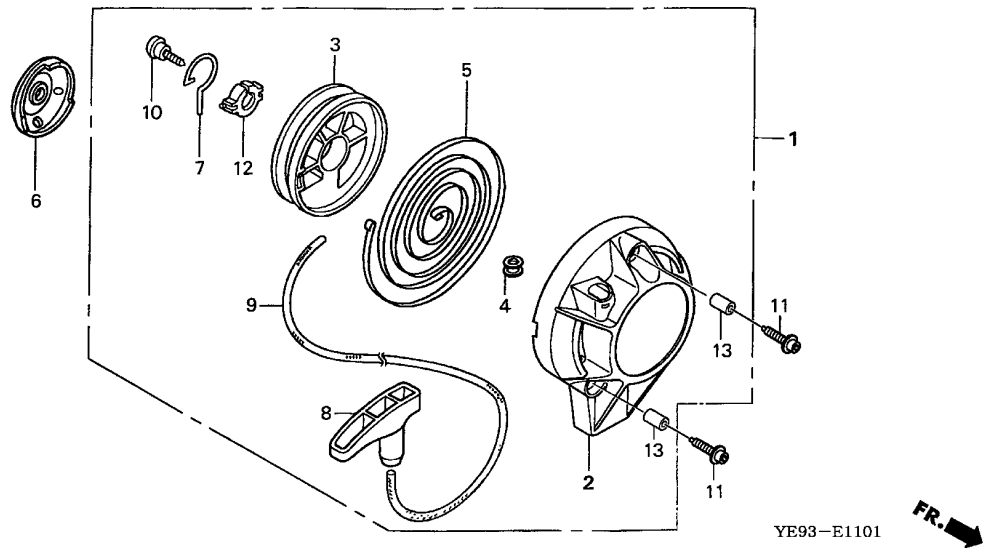

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1121B9	STARTER, RECOIL	0.1
3	1121B1	REEL, RECOIL STARTER	0.3
5	1121B7	SPRING, RECOIL STARTER RETURN	0.3
6	1121A9	PULLEY, RECOIL STARTER	0.2
7	1121D3	ARM, RECOIL STARTER SWING	0.2
9	1121B3	ROPE, RECOIL STARTER	0.3

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	28400-ZOH-003	STARTER ASSY., RECOIL	-	1		
2	28414-ZOH-003	CASE, RECOIL STARTER	-	1		
3	28421-ZOH-003	REEL, RECOIL STARTER	-	1		
4	28433-ZM3-003	GUIDE, ROPE	-	1		
5	28442-ZOH-003	SPRING, RECOIL STARTER	-	1		
6	28451-ZOH-003	PULLEY, RECOIL STARTER	-	1		
7	28459-ZOH-003	ARM, SWING	-	1		
8	28461-ZM3-003	KNOB, RECOIL STARTER	-	1		
9	28462-ZM3-003	ROPE, RECOIL STARTER	-	1		
10	90012-ZM3-003	SCREW, SETTING	-	1		
11	90018-ZOH-003	BOLT, SOCKET, 5X16	-	3		
12	91504-ZM3-003	COLLAR	-	1		
13	91506-ZM3-000	COLLAR A, HEAD COVER	-	3		

FAN COVER(WX10)

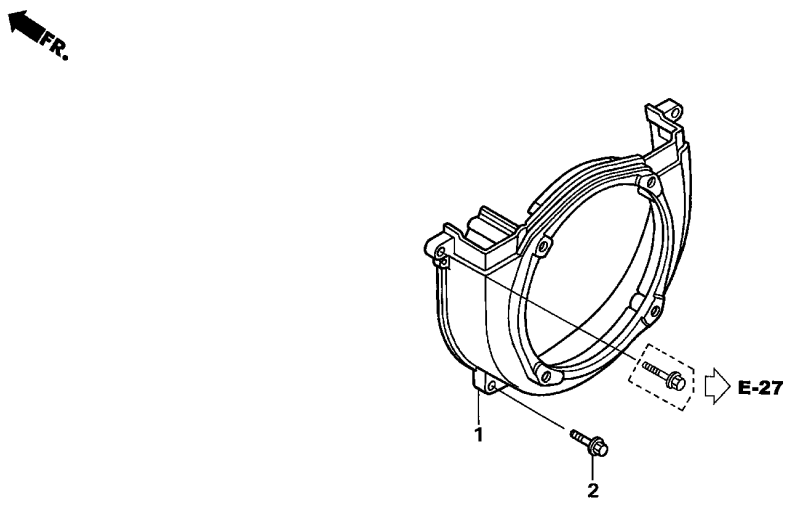

YE93−E1200B

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G8	COVER, ENGINE COOLING FAN ----	0.4

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	19611-ZM5-000	COVER, FAN ----------	1	-		
2	90005-ZM3-000	BOLT, FLANGE, 5X18 ----------	2	-		

E-12-1 FAN COVER/CLUTCH(WX10K1)

D13

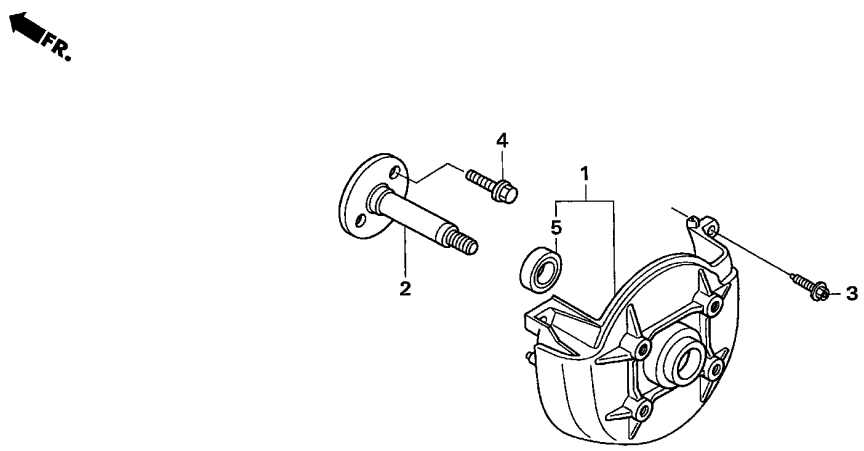

YE93−E1201

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1141G8	COVER, ENGINE COOLING FAN ----	0.4

Ref. No.	Part No.	Description	Reqd. WX 10	Reqd. QTY WX 10 K1	Serial No.	Parts catalogue code
1	19610-Z0H-801	COVER COMP., FAN ----------	-	1		
2	40210-Z0H-800	SHAFT COMP., P.T.O. -------	-	1		
3	90009-Z0H-003	BOLT, SOCKET, 5X20 --------	-	3		
4	96001-06022-00	BOLT, FLANGE, 6X22 --------	-	2		
5	96150-60010-10	BEARING, RADIAL BALL, 6001UU	-	1		

2

E-14 CARBURETOR(WX10) D14

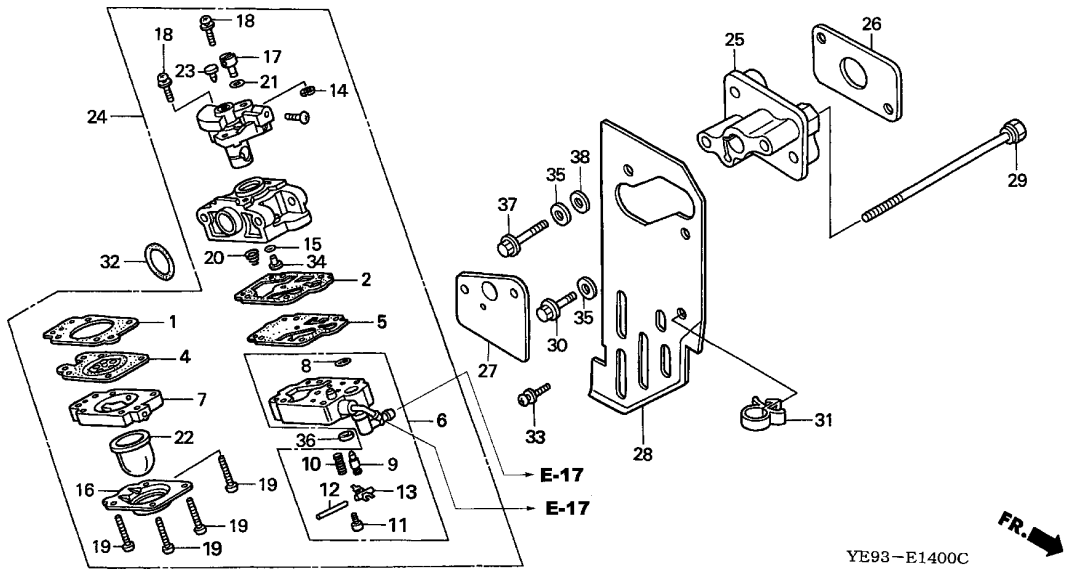

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111J0	GASKET, CARBURETOR METERING DIAPHRAGM	0.2
2	3111B7	GASKET, CARBURETOR PUMP	0.4
4	3111A8	DIAPHRAGM, CARBURETOR METERING	0.2
5	3111A9	DIAPHRAGM, CARBURETOR PUMP	0.4
6	3111A0	BODY ASSEMBLY, PUMP	0.4
7	3111A1	BODY, AIR PURGE	0.2
8	3111J3	SCREEN, CARBURETOR INLET	0.4
9	3111E3	VALVE, INLET NEEDLE	0.4
22	3111D5	PUMP, PRIMER	0.2
24	3111F3	CARBURETOR	0.2
25	3111C0	INSULATOR, CARBURETOR AND/OR PACKING, INSULATOR	0.3
27	3111C8	PACKING, CARBURETOR	0.2
28	3121C7	GUIDE, AIR INTAKE	0.3
32	3111C7	O-RING, CARBURETOR BODY	0.1
34	3111C1	JET	0.4

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	16010-ZM3-004	GASKET, METERING DIAPHRAGM	1	-		
2	16011-ZM3-004	GASKET, PUMP				
		(CARBURETOR NO.)	1	-	-------- WYL 74	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	16011-ZM3-014		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
		(CARBURETOR NO.)	1	-	WYL 74A --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
4	16013-ZM3-004	DIAPHRAGM ASSY., METERING	1	-		
5	16014-ZM3-004	DIAPHRAGM, PUMP	1	-		
6	16015-ZM3-004	BODY ASSY., PUMP	1	-	-------- --------	C3
		(CARBURETOR NO.)	1	-	-------- WYL 133	D1,D2,D3,E1,E2,E3,U1,U2,U3
		,,	1	-	-------- WYL 74A	C1,C2
	16015-ZM3-602		1	-	-------- --------	D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
		(CARBURETOR NO.)	1	-	WYL133A --------	D1,D2,D3,E1,E2,E3,U1,U2,U3
	16015-ZM3-802		1	-	-------- --------	C1/A
		(CARBURETOR NO.)	1	-	WYL 97 --------	C1,C2
7	16017-ZM3-004	BODY ASSY., AIR PURGE	1	-		
8	16018-ZM3-004	SCREEN, INLET	1	-	-------- --------	C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A,U1,U1/A,U2 U3
		(CARBURETOR NO.)	1	-	-------- WYL 74A	C1,C2
	16018-ZM3-802		1	-	-------- --------	C1/A
		(CARBURETOR NO.)	1	-	WYL 97 --------	C1,C2
9	16019-ZM3-004	VALVE, INLET NEEDLE	1	-		
10	16020-ZM3-004	SPRING, METERING LEVER	1	-		
11	16021-ZM3-004	SCREW, METERING LEVER PIN	1	-		
12	16022-ZM3-004	PIN, METERING LEVER	1	-	-------- --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,GG,U1,U2,U3
	16022-ZM3-014		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
13	16023-ZM3-004	LEVER, METERING	1	-		
14	16024-ZM3-004	RING, SPRING RETAINING	1	-		

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.		Parts catalogue code
15	16025-ZM3-004	O-RING	1	-			
16	16026-ZM3-004	COVER, PRIMER PUMP	1	-			
17	16027-ZM3-004	SWIVEL	1	-			
18	16028-ZM3-004	SCREW, THROTTLE COLLAR	2	-			
19	16029-ZM3-004	SCREW, PUMP COVER	4	-			
20	16030-ZM3-004	SPRING, PUMP	1	-			
21	16031-ZM3-004	WASHER	1	-			
22	16032-ZM3-004	PUMP, PRIMER	1	-			
23	16033-ZM3-004	PLUG					
		(CARBURETOR NO.)	1	-	--------	WYL 74A	C1,C1/A,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
24	16100-ZM5-004	CARBURETOR ASSY. (WYL 63)	1	-	--------	1064797	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	16100-ZM5-813	CARBURETOR ASSY. (WYL 74)	1	-	1064798	1161753	C1,C1/A,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	16100-ZM5-814	CARBURETOR ASSY. (WYL 74A)	1	-	--------	--------	C3
			1	-	1161754	1206091	C1,C2
			1	-	1161754	1337305	D1,D2,D3,E1,E2,E3,U1,U2,U3
	16100-ZM5-806	CARBURETOR ASSY. (WYL 97)	1	-	1206092	1432192	C1,C2
	16100-ZM5-824	CARBURETOR ASSY. (WYL 75A)	1	-	1337306	1432192	D1,D2,D3,E1,E2,E3,U1,U2,U3
	16100-ZM5-807	CARBURETOR ASSY. (WYL 127)	1	-	1432193	--------	C1,C2
			1	-	--------	2109556	C1/A
	16100-ZM5-825	CARBURETOR ASSY. (WYL 133/133A)	1	-	--------	--------	GG
			1	-	1432193	--------	D1,D2,D3,E1,E2,E3,U1,U2,U3
			1	-	--------	2109518	D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
	16100-ZM5-808	CARBURETOR ASSY. (WYL 127)	1	-	2109557	--------	C1/A
	16100-ZM5-826	CARBURETOR ASSY. (WYL 133A)	1	-	2109519	--------	D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
25	16211-ZM3-000	INSULATOR, CARBURETOR	1	-	--------	--------	C3
			1	-	--------	1412244	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	16211-ZM3-U30		1	-	--------	--------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1412245	--------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
26	16212-ZM3-000	PACKING, INSULATOR	1	-			
27	16221-ZM3-000	PACKING, CARBURETOR	1	-	--------	--------	C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A,U1,U1/A,U2,U3
		(CARBURETOR NO.)	1	-	--------	WYL 74A	C1,C2
	16221-ZM3-G10		1	-	--------	--------	C1/A
		(CARBURETOR NO.)	1	-	WYL 97	--------	C1,C2
28	19651-ZM3-000	GUIDE, AIR INLET	1	-	--------	--------	C3
			1	-	--------	1412244	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	19651-ZM3-U30		1	-	--------	--------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1412245	--------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
29	90010-ZM3-000	BOLT, HEX., 5X75	2	-			
30	90112-GK8-010	BOLT, FLANGE, 5X22	1	-	--------	--------	C3
			1	-	--------	1412244	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	90112-ZM3-U30	BOLT, FLANGE, 5X32	1	-	--------	--------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1412245	--------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
31	90659-680-013	CLIP, WIRE HARNESS	1	-			
32	91301-ZM3-000	O-RING, 14.8X2.4	1	-			
33	93894-05010-00	SCREW-WASHER, 5X10	1	-			
34	99101-ZM3-0400	JET (#40)					
		(CARBURETOR NO.)	1	-	--------	WYL 63	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	99101-ZM3-0410	JET (#41)					
		(CARBURETOR NO.)	(1)	-	--------	WYL 63	C1,C1/A,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	99101-ZM3-0420	JET (#42)					
		(CARBURETOR NO.)	(1)	-	--------	WYL 63	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3

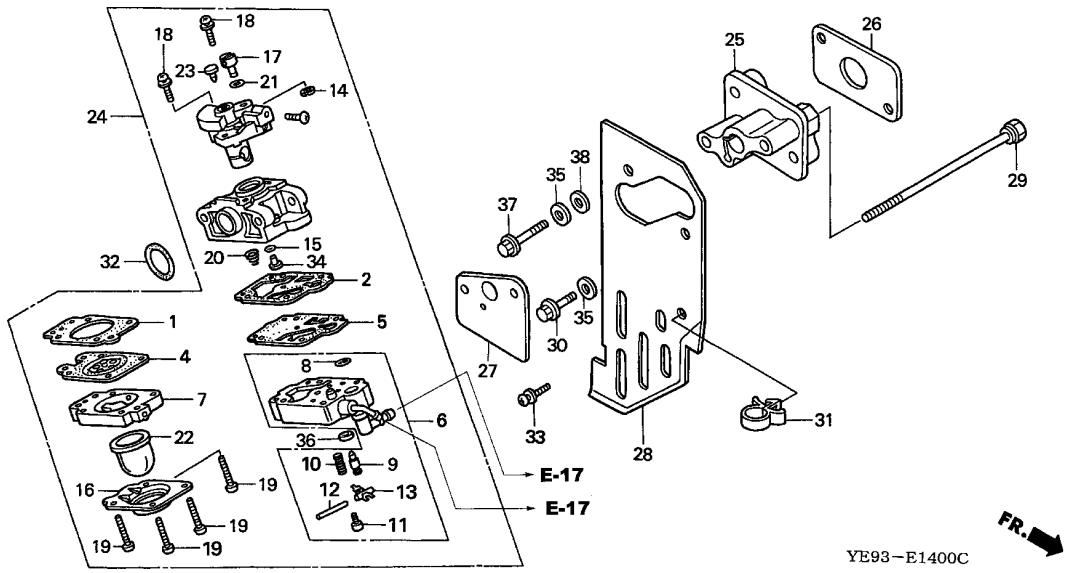

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
34)	99101-ZM3-0400	JET (#40)				
		(CARBURETOR NO.)	(1)	-	WYL 74 WYL 75A	D1,D2,D3,E1,E2,E3,U1,U2,U3
		,,	(1)	-	WYL 74 WYL 97	C1,C2,C3
	99101-ZM3-0410	JET (#41)				
		(CARBURETOR NO.)	(1)	-	WYL 74 WYL 126	C1,C2,C3
		,,	(1)	-	WYL 74 WYL 132	D1,D2,D3,E1,E2,E3,U1,U2,U3
	99101-ZM3-0420	JET (#42)				
		(CARBURETOR NO.)	1	-	WYL 74 WYL 126	C1,C2,C3
		,,	1	-	WYL 74 WYL 132	D1,D2,D3,E1,E2,E3,U1,U2,U3
	99101-ZM3-0330	JET (#33.5)	(1)	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
		(CARBURETOR NO.)	(1)	-	WYL 127 --------	C1,C2
		,,	(1)	-	WYL 133 --------	D1,D2,D3,E1,E2,E3,U1,U2,U3
	99102-ZM3-0340	JET (#34.5)	(1)	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
		(CARBURETOR NO.)	(1)	-	WYL127 --------	C1,C2
		,,	(1)	-	WYL133 --------	D1,D2,D3,E1,E2,E3,U1,U2,U3
	99102-ZM3-0350	JET (#35.5)	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
		(CARBURETOR NO.)	1	-	WYL127 --------	C1,C2
		,,	1	-	WYL133 --------	D1,D2,D3,E1,E2,E3,U1,U2,U3
35	18292-167-890	PACKING, PROTECTOR	2	-	-------- --------	D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			2	-	1064798 --------	C1,C1/A,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
36	16035-ZM3-802	FILTER, FUEL INLET	1	-	-------- --------	C1/A
		(CARBURETOR NO.)	1	-	WYL 97 --------	C1,C2
37	90103-P4V-010	BOLT, FLANGE, 5X35	1	-		
38	94101-05800	WASHER, PLAIN, 5MM	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1412245 --------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3

E-14-1 CARBURETOR(WX10K1)

E 1

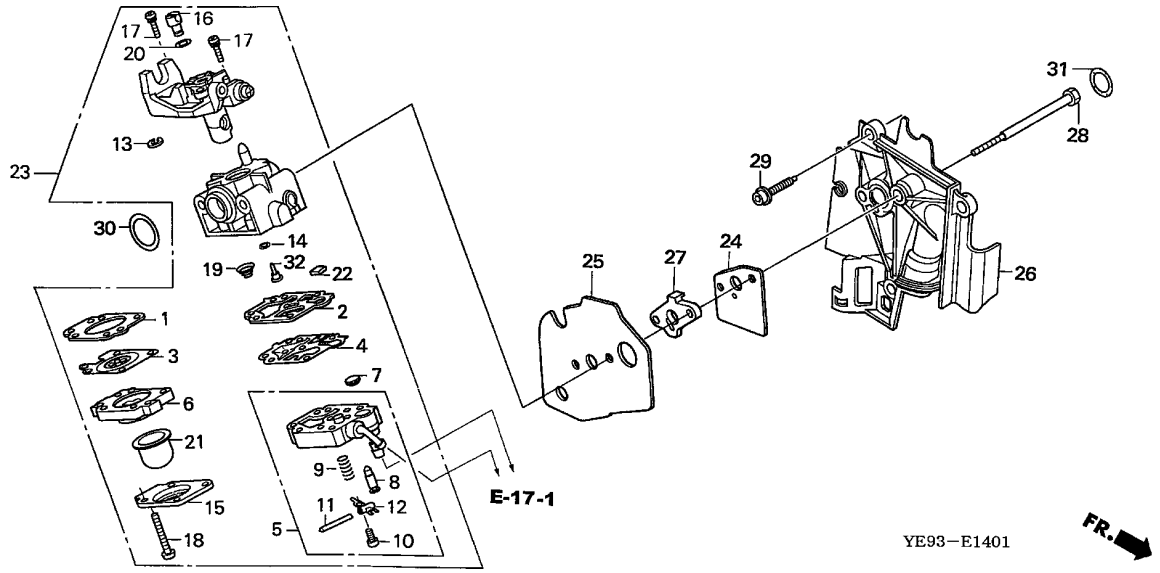

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3111J0	GASKET, CARBURETOR METERING DIAPHRAGM	0.2
2	3111B7	GASKET, CARBURETOR PUMP	0.4
3	3111A8	DIAPHRAGM, CARBURETOR METERING	0.2
4	3111A9	DIAPHRAGM, CARBURETOR PUMP	0.4
5	3111A0	BODY ASSEMBLY, PUMP	0.4
6	3111A1	BODY, AIR PURGE	0.2
7	3111J3	SCREEN, CARBURETOR INLET	0.4
8	3111E3	VALVE, INLET NEEDLE	0.4
21	3111D5	PUMP, PRIMER	0.2
23	3111F3	CARBURETOR	0.2
24	3111C8	PACKING, CARBURETOR	0.2
25	3111L3	PACKING, CARBURETOR SHROUD	0.2
26	4141E3	SHROUD, ENGINE	0.2
27	4141E7	SPACER, SHROUD	0.2
30	3111C7	O-RING, CARBURETOR BODY	0.1
32	3111C1	JET	0.4

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	16010-ZM3-004	GASKET, METERING DIAPHRAGM	-	1		
2	16011-ZOH-003	GASKET, PUMP	-	1		
3	16013-ZOH-003	DIAPHRAGM ASSY., METERING	-	1		
4	16014-ZM3-004	DIAPHRAGM, PUMP	-	1		
5	16015-ZOH-003	BODY ASSY., PUMP	-	1		
6	16017-ZM3-004	BODY ASSY., AIR PURGE	-	1		
7	16018-ZM3-802	SCREEN, INLET	-	1		
8	16019-ZM3-004	VALVE, INLET NEEDLE	-	1		
9	16020-ZM3-004	SPRING, METERING LEVER	-	1		
10	16021-ZM3-004	SCREW, METERING LEVER PIN	-	1		
11	16022-ZM3-014	PIN, METERING LEVER	-	1		
12	16023-ZM3-004	LEVER, METERING	-	1		
13	16024-ZOH-003	RING, RETAINING	-	1		
14	16025-ZM3-004	O-RING	-	1		
15	16026-ZM3-004	COVER, PRIMER PUMP	-	1		
16	16027-ZM3-004	SWIVEL	-	1		
17	16028-ZM3-004	SCREW, THROTTLE COLLAR	-	2		
18	16029-ZM3-004	SCREW, PUMP COVER	-	4		
19	16030-ZM3-004	SPRING, PUMP	-	1		
20	16031-ZM3-004	WASHER	-	1		
21	16032-ZM3-004	PUMP, PRIMER	-	1		
22	16035-ZM3-802	FILTER, FUEL INLET	-	1		
23	16100-ZOH-G91	CARBURETOR ASSY. (WYB 21)	-	1	-------- --------	U
	16100-ZOH-832	CARBURETOR ASSY. (WYB 10)	-	1	-------- --------	D1,D3,E2
	16100-ZOH-843	CARBURETOR ASSY. (WYB 12A)	-	1	-------- --------	C,D2,E1,GG

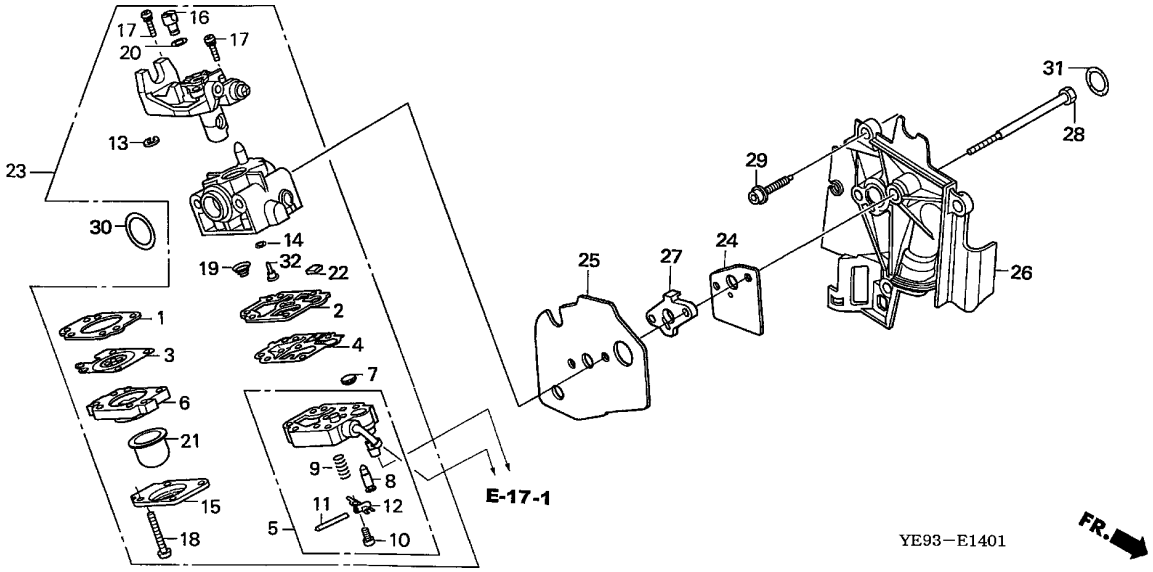

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
24	16221-ZM3-000	PACKING, CARBURETOR	-	1		
25	16222-ZOH-800	PACKING, SHROUD	-	1		
26	19631-ZOH-000	SHROUD	-	1		
27	19632-ZOH-800	SPACER, SHROUD	-	1		
28	90014-ZOH-801	BOLT, 5X59	-	2		
29	90018-ZOH-003	BOLT, SOCKET, 5X16	-	3		
30	91301-ZM3-000	O-RING, 14.8X2.4	-	1		
31	91308-ZOH-003	O-RING, 12.3X2.4	-	1		
32	99101-ZOH-0320	JET (#32)	-	(1)	-------- --------	C,D1,D2,D3,E1,E2,GG
	99101-ZM5-0330	JET (#33)	-	(1)		
	99101-ZM5-0340	JET (#34)	-	1	-------- --------	C,D1,D2,D3,E1,E2,GG
			-	(1)	-------- --------	U
	99101-ZM5-0350	JET (#35)	-	1	-------- --------	U

AIR CLEANER(WX10)

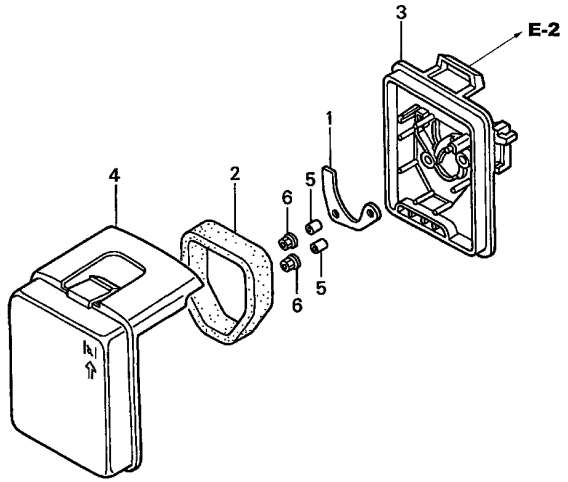

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3121B8	ELEMENT, AIR CLEANER ·····	0.1
3	3121A5	CASE, AIR CLEANER ·····	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.		Parts catalogue code
1	17204-ZM3-000	PLATE, OIL TRAP ·····	1	-			
2	17211-ZM3-000	ELEMENT, AIR CLEANER ·····	1	-			
3	17220-ZM3-000ZA	CASE COMP., AIR CLEANER					
		R8.....BRIGHT RED	1	-	--------	--------	C3
			1	-	--------	1465505	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	17220-ZM3-010ZA	*R8*.....BRIGHT RED	1	-	1465506	1795195	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	17220-ZM3-010ZB	*NH1*.....BLACK	1	-	--------	--------	GG,GG/A
	17220-ZM3-010ZD	*R291R*.....DARK POWER RED	1	-	--------	--------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,U1/A
			1	-	1795196	--------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
4	17231-ZM3-000ZA	COVER, AIR CLEANER					
		R8.....BRIGHT RED	1	-	--------	--------	C3
			1	-	--------	1465505	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	17231-ZM3-010ZA	*R8*.....BRIGHT RED	1	-	1465506	1795279	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	17231-ZM3-010ZB	*NH1*.....BLACK	1	-	--------	--------	GG,GG/A
	17231-ZM3-010ZD	*R291R*.....DARK POWER RED	1	-	--------	--------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,U1/A
			1	-	1795280	--------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
5	91503-ZM3-000	COLLAR, AIR CLEANER ·····	2	-			
6	94050-05000	NUT, FLANGE, 5MM ·····	2	-			

E-15-1 AIR CLEANER(WX10K1)

E 4

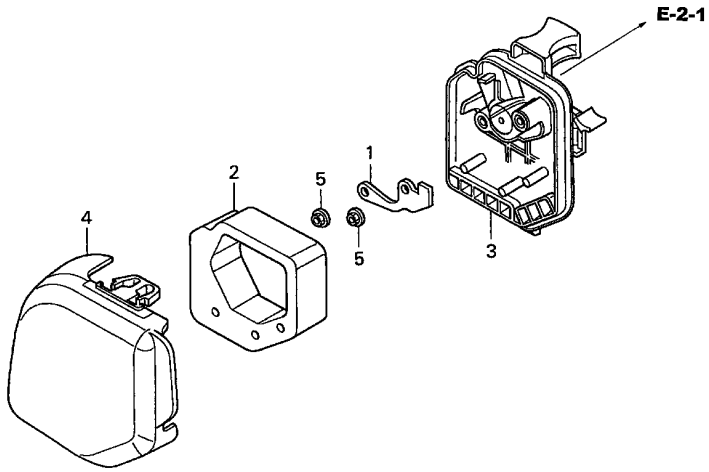

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	3121B8	ELEMENT, AIR CLEANER	0.1
3	3121A5	CASE, AIR CLEANER	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	17204-ZOH-000	PLATE, OIL TRAP	-	1		
2	17211-ZOH-000	ELEMENT, AIR CLEANER	-	1		
3	17220-ZOH-000	CASE COMP., AIR CLEANER	-	1		
4	17231-ZOH-000	COVER, AIR CLEANER	-	1		
5	94050-05000	NUT, FLANGE, 5MM	-	2		

MUFFLER(WX10)

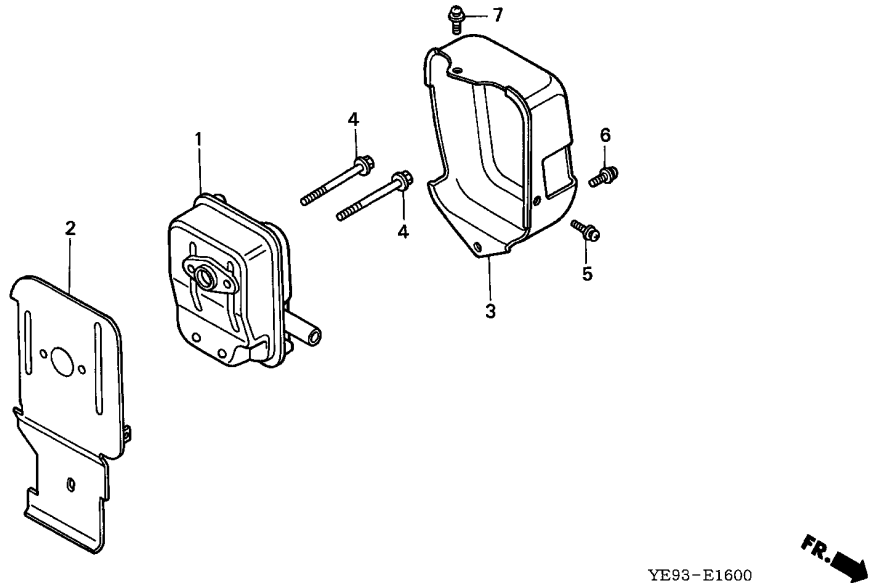

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3131C5	MUFFLER, EXHAUST	0.3
2	3131B6	GUIDE, AIR EXHAUST	0.3

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	18310-ZM3-000	MUFFLER COMP.	1	-		
2	18515-ZM3-000	GUIDE, AIR EX.	1	-	-------- --------	C1,C1/A,C2,C3,D1,D1/A,D2,D2/A,D3,D3/A,U1,U1/A,U2,U3
	18515-ZM3-810		1	-	-------- --------	E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A
3	19722-ZM3-000	INNER COVER, TOP	1	-		
4	90004-ZM3-000	BOLT, FLANGE, 5X50	2	-		
5	93891-05008-00	SCREW-WASHER, 5X8	1	-		
6	93894-05010-00	SCREW-WASHER, 5X10	1	-		
7	93894-05016-00	SCREW-WASHER, 5X16	1	-		

MUFFLER(WX10K1)

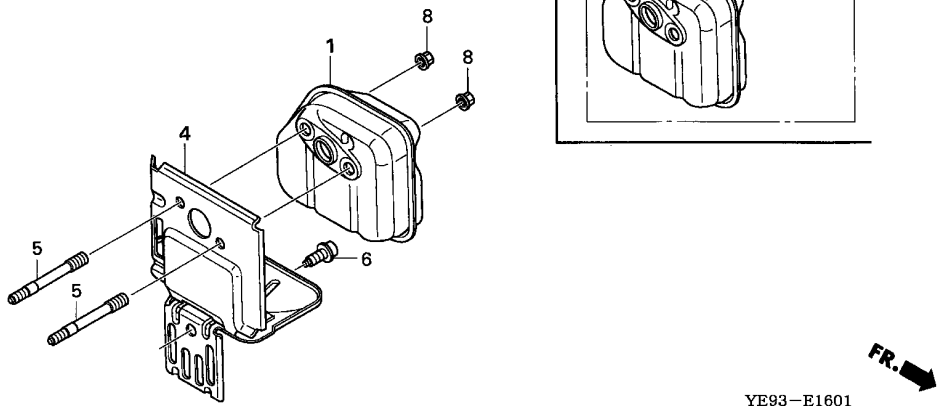

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1		(2)	
	3131C5	MUFFLER, EXHAUST ----------	0.3
4	3131B6	GUIDE, AIR EXHAUST ----------	0.3

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	18310-ZOH-000	MUFFLER COMP. ----------	-	1	-------- --------	D1,D2,D3,E1,E2,GG
2	18310-ZOH-800	MUFFLER COMP. ----------	-	1	-------- --------	C,U
3	18350-ZOH-800	ARRESTER COMP., SPARK ----	-	1	-------- --------	C,U
4	18515-ZOH-000	GUIDE, AIR EX. ----------	-	1		
5	90001-ZOH-003	BOLT, STUD, 2.5X42 -------	-	2		
6	90011-ZOH-003	BOLT, SOCKET, 5X10(CT) ---	-	1		
7	90055-ZE1-000	SCREW, TAPPING, 4X6 ------	-	2	-------- --------	C,U
8	90136-SM4-901	NUT, SELF-LOCK, 5MM ------	-	2		

FUEL TANK(WX10)

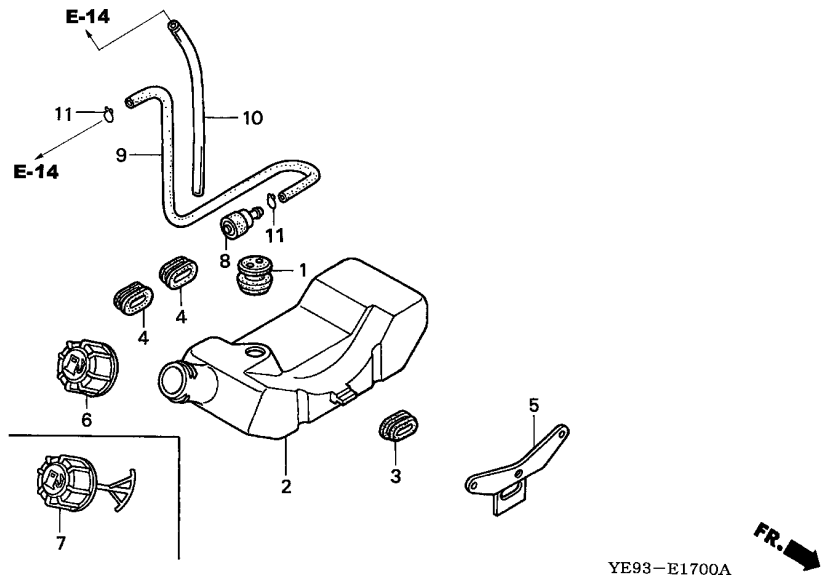

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101J0	GROMMET, FUEL TUBE	0.1
2	3101H7	TANK, FUEL	0.4
8	3101A6	FILTER, FUEL	0.2
9	3101F1	TUBE, FUEL TANK	0.2

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	17504-ZM3-003	GROMMET, FUEL TUBE	1	-		
2	17511-ZM3-003	TANK, FUEL	1	-	-------- --------	E1,E2,E3,GG
	17511-ZM5-003		1	-	-------- --------	C1,C2,C3,D1,D2,D3,U1,U2,U3
	17511-ZM5-013		1	-	-------- 2168923	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
	17511-ZM5-023		1	-	2168924 --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
3	17532-ZM3-010	RUBBER A, TANK MOUNTING	1	-		
4	17533-ZM3-000	RUBBER B, TANK MOUNTING	2	-		
5	17561-ZM3-010	STAY, FUEL TANK	1	-		
6	17620-ZM3-043	CAP ASSY., FUEL TANK	1	-	-------- --------	C1,C2,C3,D1,D2,D3,U1,U2,U3
	17620-ZM3-053		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,U1/A
7	17620-ZM3-815	CAP ASSY., FUEL TANK	1	-	-------- --------	E1,E2,E3,GG
	17620-ZM3-816		1	-	-------- --------	E1/A,E2/A,E3/A,GG/A
8	17672-ZM3-003	FILTER, FUEL	1	-	-------- --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,GG,U1,U2,U3
			1	-	-------- 2168923	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
	17672-ZOH-003		1	-	2168924 --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
9	17701-ZM3-003	TUBE, FUEL	1	-		
10	17702-ZM3-003	TUBE, FUEL RETURN	1	-		
11	91401-ZM3-003	CLIP, TUBE	2	-		

FUEL TANK(WX10K1)

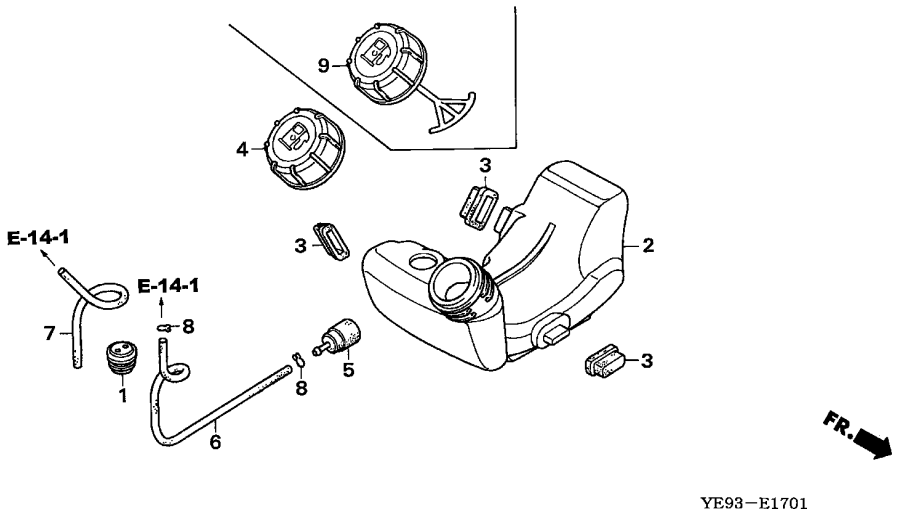

YE93−E1701

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	3101J0	GROMMET, FUEL TUBE	0.2
2	3101H7	TANK, FUEL	0.4
5	3101A6	FILTER, FUEL	0.2
6	3101F1	TUBE, FUEL TANK	0.2

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	17504-ZM3-003	GROMMET, FUEL TUBE	-	1		
2	17511-ZOH-023	TANK, FUEL	-	1		
3	17533-ZOH-000	RUBBER, TANK MOUNTING	-	3		
4	17620-ZM3-053	CAP ASSY., FUEL TANK	-	1	-------- --------	C,D1,D3,E2,U
5	17672-ZOH-003	FILTER, FUEL	-	1		
6	17701-ZOH-003	TUBE, FUEL TANK	-	1		
7	17702-ZOH-003	TUBE, FUEL RETURN	-	1		
8	91401-ZM3-003	CLIP, TUBE	-	2		
9	17620-ZM3-816	CAP ASSY., FUEL TANK	-	1	-------- --------	D2,E1,GG

FLYWHEEL/IGNITION COIL(WX10)

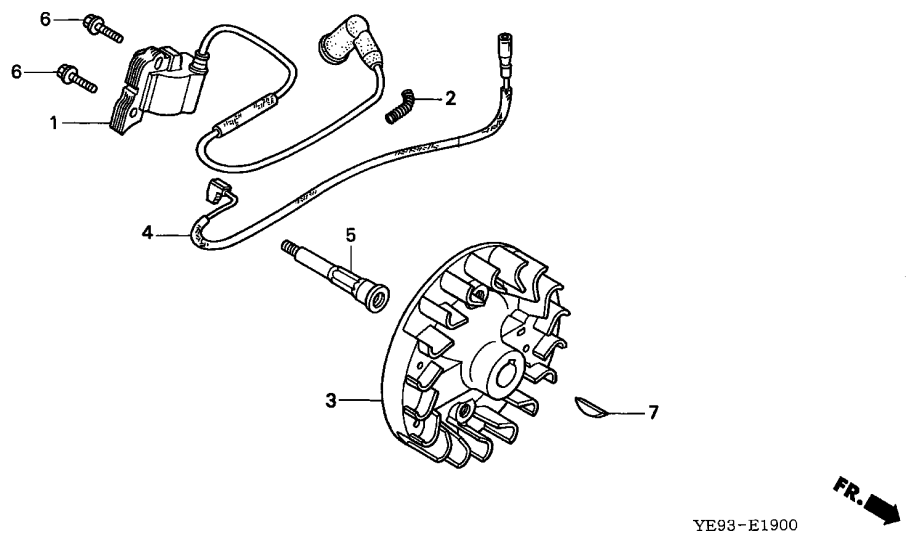

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION	0.4
3	2161B5	FLYWHEEL	0.4
4	6111B3	CORD, STOP SWITCH	0.3
5	2141H4	SHAFT, POWER TAKE OFF	0.4

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	30500-ZM3-003	COIL ASSY., IGNITION	1	-		
2	30519-ZM3-000	TUBE A, CORRUGATED (7X18)	1	-		
3	31110-ZM5-800	FLYWHEEL COMP.	1	-		
4	32195-ZM5-800	CORD, STOP SWITCH	1	-		
5	40215-ZM5-G00	SHAFT, P.T.O.	1	-		
6	93401-05016-00	BOLT-WASHER, 5X16	2	-		
7	94401-16120	KEY, WOODRUFF, 16X12	1	-		

FLYWHEEL/IGNITION COIL(WX10K1)

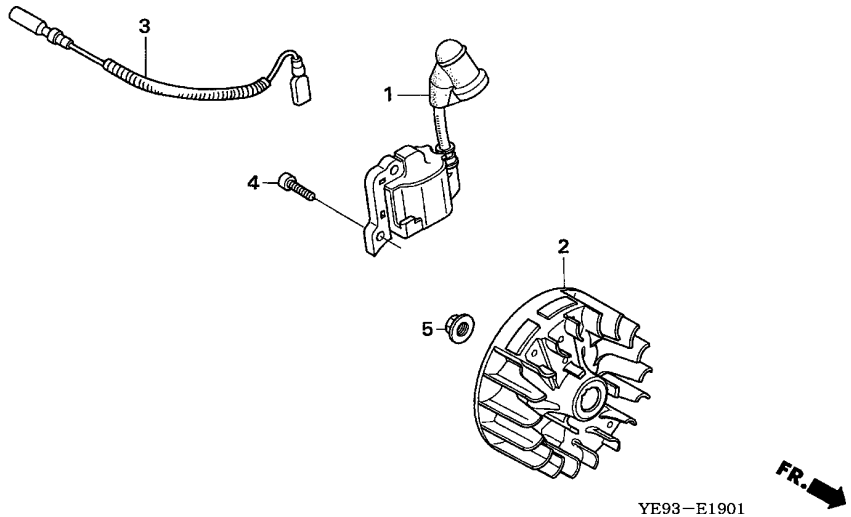

YE93−E1901

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	6141A5	COIL, IGNITION	0.2
2	2161B5	FLYWHEEL	0.4
3	6111B3	CORD, STOP SWITCH	0.2

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	30500-ZOH-023	COIL ASSY., IGNITION	-	1		
2	31110-ZOH-811	FLYWHEEL COMP.	-	1		
3	32195-ZOH-800	CORD, STOP SWITCH	-	1		
4	90012-ZOH-005	BOLT, SOCKET, 4X14	-	2		
5	90355-427-770	NUT, FLANGE, 7MM	-	1		

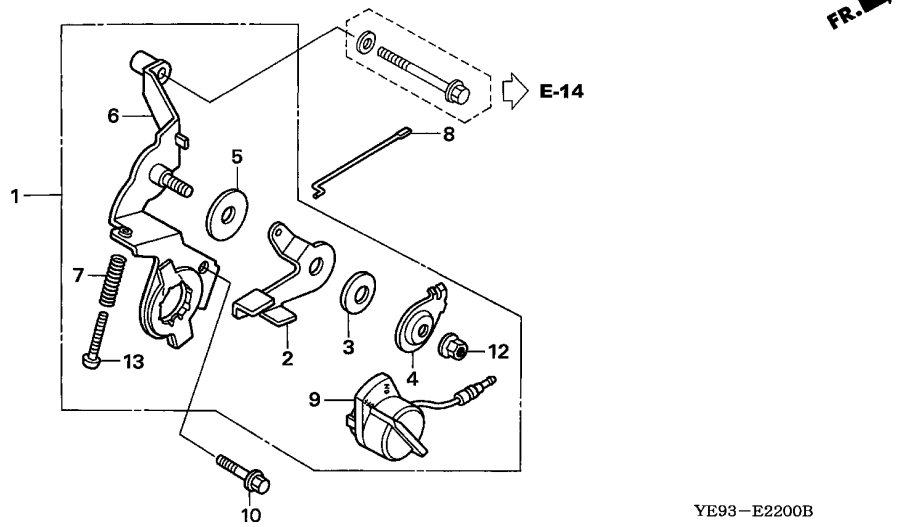

YE93−E2200B

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1161A5	CONTROL, THROTTLE/GOVERNOR	0.2
2	1161A8	LEVER, CONTROL	0.3
6	1161A2	BASE, CONTROL	0.3
8	8101R4	ROD, THROTTLE	0.1
9	6151D9	SWITCH, ENGINE STOP	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	16500-ZM5-800	CONTROL ASSY.	1	-	-------- --------	C3
			1	-	-------- 1412244	C1,C2,D1,D2,D3,U1,U2,U3
	16500-ZM5-810		1	-	-------- 1412244	E1,E2,E3
	16500-ZM5-801		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,U1/A
			1	-	1412245 --------	C1,C2,D1,D2,D3,U1,U2,U3
	16500-ZM5-811		1	-	-------- --------	E1/A,E2/A,E3/A,GG,GG/A
			1	-	1412245 --------	E1,E2,E3
2	16571-ZM5-800	LEVER, CONTROL	1	-		
3	16574-ZE1-000	SPRING, LEVER	1	-		
4	16575-ZH8-000	WASHER, CONTROL LEVER	1	-		
5	16578-ZE1-000	SPACER, CONTROL LEVER	1	-		
6	16580-ZM5-800	BASE COMP., CONTROL	1	-	-------- --------	C3
			1	-	-------- 1412244	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	16580-ZM5-801		1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
			1	-	1412245 --------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
7	16584-883-300	SPRING, CONTROL ADJUSTING	1	-		
8	17841-ZM5-800	ROD, THROTTLE	1	-		
9	36100-ZE1-015	SWITCH ASSY., ENGINE STOP	1	-	-------- --------	C1,C1/A,C2,C3,D1,D1/A,D2,D2/A,D3,D3/A,U1,U1/A,U2,U3
	36100-ZH8-W41		1	-	-------- --------	E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A
10	90005-896-000	BOLT, FLANGE, 5X16	1	-		
12	90114-SA0-000	NUT, SELF-LOCK, 6MM	1	-		
13	93500-05025-0A	SCREW, PAN, 5X25	1	-		

CONTROL(WX10K1)

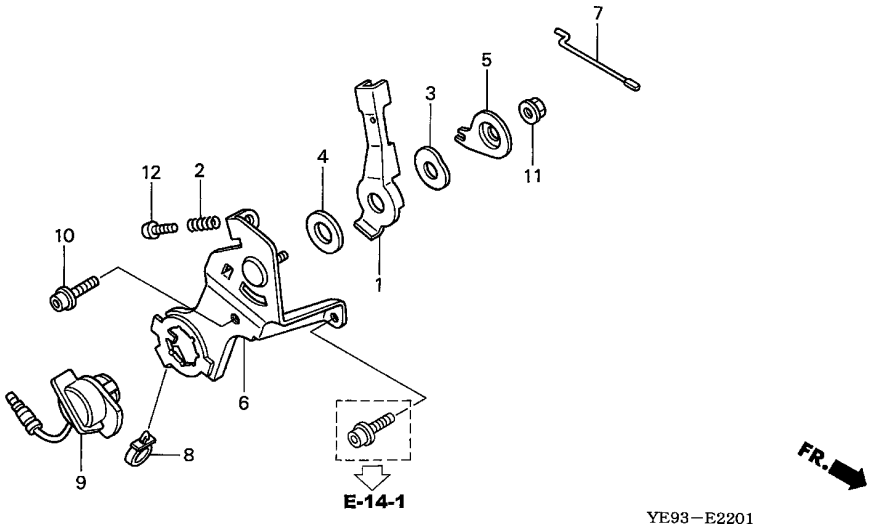

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1161A8	LEVER, CONTROL	0.3
6	1161A2	BASE, CONTROL	0.3
9	6151D9	SWITCH, ENGINE STOP	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	16571-ZOH-800	LEVER, CONTROL	-	1		
2	16571-892-000	SPRING, CONTROL ADJUSTING	-	1		
3	16574-ZE1-000	SPRING, LEVER	-	1		
4	16575-ZH8-000	WASHER, CONTROL LEVER	-	1		
5	16578-ZE1-000	SPACER, CONTROL LEVER	-	1		
6	16580-ZOH-800	BASE COMP., CONTROL	-	1		
7	17841-ZOH-800	ROD, THROTTLE	-	1		
8	30701-883-000	CLIP, HIGH TENSION CORD (8MM)	-	1		
9	35120-ZOD-V81	SWITCH ASSY., ENGINE STOP	-	1		
10	90011-ZOH-801	BOLT, SOCKET, 5X10	-	1		
11	90114-SAO-000	NUT, SELF-LOCK, 6MM	-	1		
12	93500-05025-0A	SCREW, PAN, 5X25	-	1		

TOP COVER(WX10)

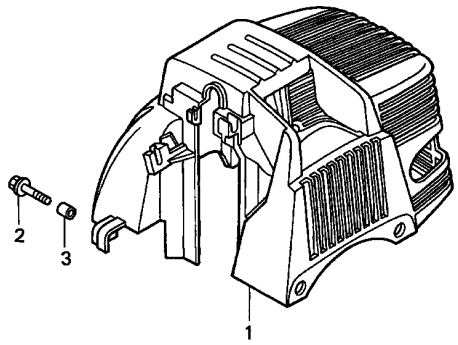

YE93-E2700

FR.

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111D6	COVER, ENGINE TOP ----------	0.3

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	19720-ZM3-000ZA	COVER COMP., TOP				
		R8.....BRIGHT RED	1	-	-------- --------	C3
			1	-	-------- 1795279	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
	19720-ZM3-H10	COVER COMP., TOP (GARDENA) --	1	-	-------- --------	GG,GG/A
	19720-ZM3-000ZB	COVER COMP., TOP				
		R280.....POWER RED	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,U1/A
			1	-	1795280 --------	C1,C2,D1,D2,D3,E1,E2,E3,U1,U2,U3
2	90112-GK8-010	BOLT, FLANGE, 5X22 ----------	2	-		
3	91502-ZM3-000	COLLAR, TOP COVER ----------	2	-		

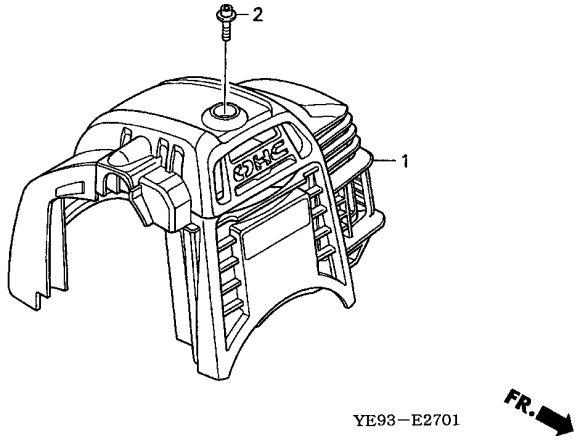

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	1111D6	COVER, ENGINE TOP ----------	0.2

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	19720-ZOH-H1OZA	COVER COMP., TOP				
		NH1.....BLACK	-	1	-------- --------	GG
	19720-ZOH-OOOZB	*R28O*.....POWER RED	-	1	-------- --------	C,D1,D2,D3,E1,E2,U
2	90015-ZOH-OO3	BOLT, TOP COVER ----------	-	1		

LABEL(WX10)

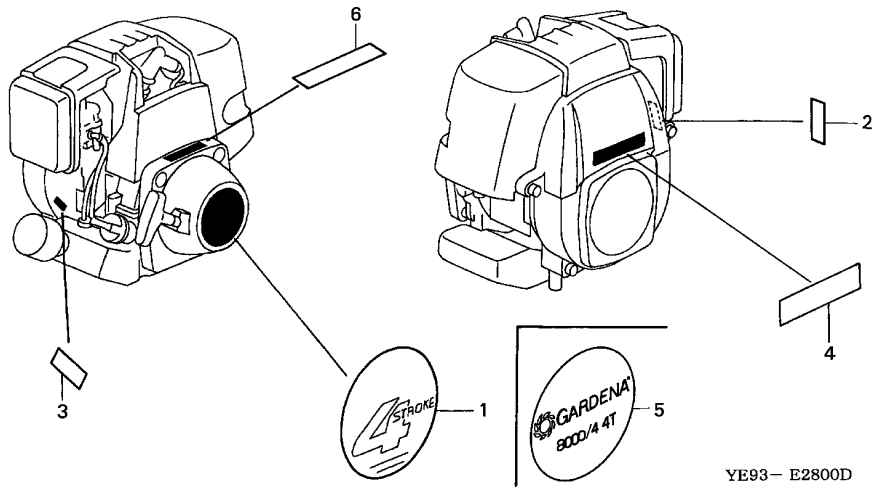

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			

Ref. No.	Part No.	Description	Reqd. WX 10	Reqd. QTY WX 10 K1	Serial No.		Parts catalogue code
1	87521-ZM5-G00	EMBLEM (WX10) ----------	1	-	--------	1945262	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	87521-ZM5-G01	----------	1	-	--------	--------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,U1/A
			1	-	1945263	--------	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
2	87532-ZM3-G00	MARK, THROTTLE INDICATION ---	1	-			
3	87601-ZM5-G20	MARK, TYPE (AY3) ----------	1	-	--------	--------	C1,C1/A,C2,C3
	87601-ZM5-G30	MARK, TYPE (AY4) ----------	1	-	--------	--------	E1,E1/A,E2,E2/A,E3,E3/A
	87601-ZM5-G40	MARK, TYPE (AY5) ----------	1	-	--------	--------	D1,D1/A,D2,D2/A,D3,D3/A
	87601-ZM5-G50	MARK, TYPE (AY6) ----------	1	-	--------	--------	U1,U1/A,U2,U3
	87601-ZM5-H10	MARK, TYPE (AD1) ----------	1	-	--------	--------	GG,GG/A
4	87135-ZE2-020	LABEL, E-SPEC (15.5X27.5) ---	1	-	--------	--------	D1/A,D2/A,D3/A,U1/A
			1	-	1503215	--------	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
			1	-	--------	2109556	C1/A,E1/A,E2/A,E3/A
5	87521-ZM5-H10	EMBLEM (GARDENA) ----------	1	-	--------	--------	GG,GG/A
6	87637-ZM3-800	MARK (C-TICK) ----------	1	-	--------	--------	U1,U1/A,U2,U3

LABEL(WX10K1)

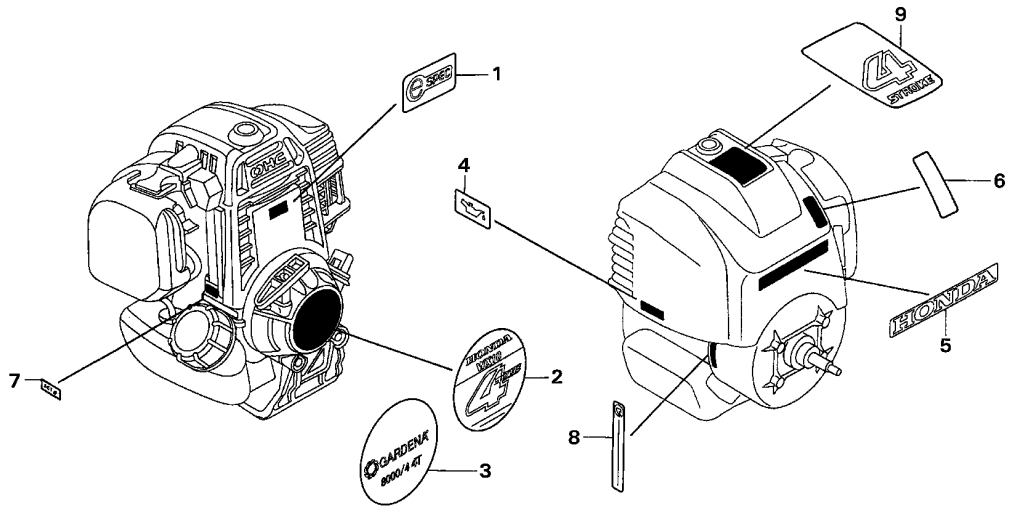

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
		NO INFORMATION ----------	

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	87135-ZE2-020	LABEL, E-SPEC (15.5X27.5) ---	-	1	-------- --------	D1,D3,E2,U
2	87521-ZOH-G40	MARK, EMBLEM ----------	-	1	-------- --------	C,D1,D2,D3,E1,E2,U
3	87521-ZOH-H10	MARK, EMBLEM ----------	-	1	-------- --------	GG
4	87531-YE9-000	MARK, OIL CAUTION ----------	-	1	-------- --------	GG
	87594-VF9-G11	----------	-	1	-------- --------	C,D1,D2,D3,E1,E2,U
5	87531-ZOH-000	MARK, HONDA ----------	-	1	-------- --------	C,D1,D2,D3,E1,E2,U
6	87532-ZM3-G00	MARK, THROTTLE INDICATION ---	-	1		
7	87601-ZOH-G50	MARK, TYPE (AY3) ----------	-	1	-------- --------	D1,D3,E2
	87601-ZOH-G60	MARK, TYPE (AY4) ----------	-	1	-------- --------	D2,E1
	87601-ZOH-G80	MARK, TYPE (AY6) ----------	-	1	-------- --------	C
	87601-ZOH-G90	MARK, TYPE (AY7) ----------	-	1	-------- --------	U
	87601-ZOH-H10	MARK, TYPE (AY8) ----------	-	1	-------- --------	GG
8	87637-ZM3-800	MARK (C-TICK) ----------	-	1	-------- --------	U
9	87660-ZOH-J00	MARK (4-STROKE) ----------	-	1	-------- --------	C,D1,D2,D3,E1,E2,U
	87660-ZOH-000	----------	-	1	-------- --------	GG

TOOL(WX10)

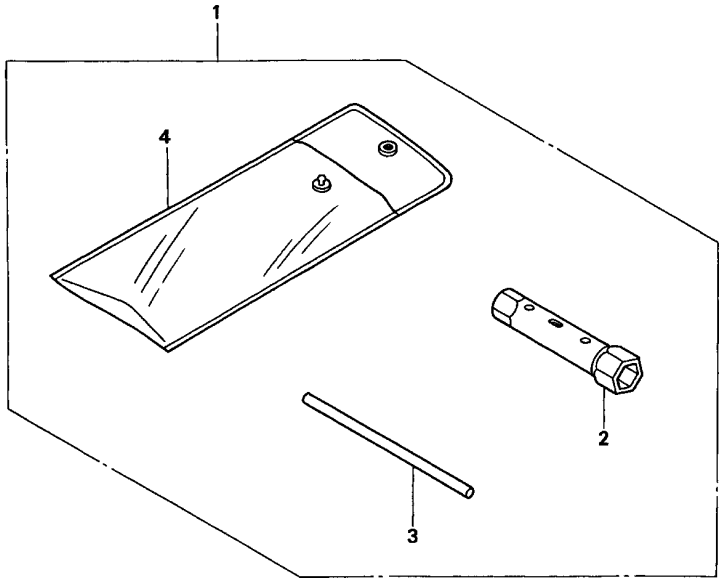

YE93-E2900

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	89000-ZM3-000	TOOL KIT ----------	1	-		
2	89216-045-010	WRENCH, SPARK PLUG ----------	1	-		
3	99005-01000	BAR A, HANDLE ----------	1	-		
4	99008-01600	BAG, TOOL, 160MM ----------	1	-		

F-1 CASING(WX10)

G 1

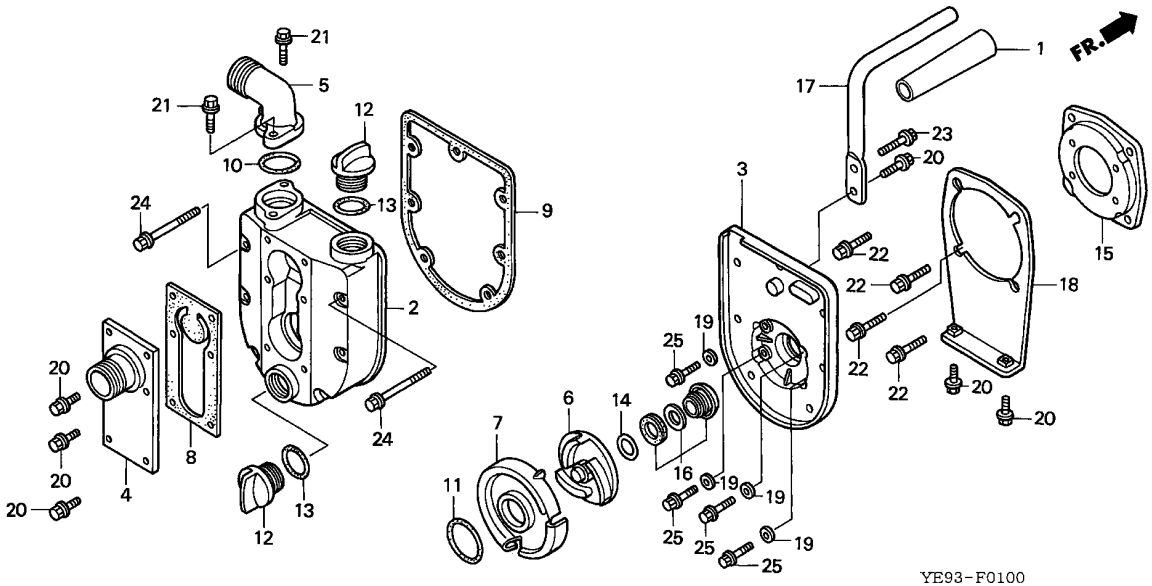

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
2	2151G6	CASING, WATER PUMP ----------	0.3
3	2151M5	PLATE, WATER PUMP CASING END -	0.4
4	2151L8	PLATE, PUMP SUCTION ----------	0.1
5	2151H2	PIPE, CASING :OUTLET ---------	0.1
6	2151G4	IMPELLER, CASING ------------	0.3
7	2151G3	CASE, CASING VOLUTE ----------	0.2
8	2151L9	PACKING, PUMP SUCTION --------	0.1
9	2151M3	PACKING, WATER PUMP CASING END PLATE ----------	0.2
11	2151M4	RING, CASING VOLUTE CASE SEAL	0.2
14	2151M0	SHIM, CASING ADJUSTER --------	0.3
15	2151M1	CASE, PUMP SPACER ------------	0.4
16	2151G5	SEAL, CASING MECHANICAL ------	0.4
17	8101X0	HANDLE, CASING --------------	0.1
18	2151M2	BRACKET, PUMP CASING ---------	0.4

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	22542-900-000	GRIP, LEVER ----------	1	-		
2	78101-YE9-003	CASING ----------	1	-	-------- --------	C2,C3,U2,U3
			1	-	-------- 1053161	C1,D1,D2,D3,E1,E2,E3,GG,U1
	78101-YE9-013	----------	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG/A,U1/A
			1	-	1053162 --------	C1,D1,D2,D3,E1,E2,E3,GG,U1
3	78102-YE9-003	PLATE, END ----------	1	-		
4	78103-YE9-003	PLATE, SUCTION ----------	1	-	-------- --------	C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A,U1,U1/A,U2 U3
			1	-	-------- 1021045	C1,C2
	78103-YE9-611	----------	1	-	-------- --------	C1/A
			1	-	1021046 --------	C1,C2
5	78104-YE9-003	PIPE, OUTLET ----------	1	-	-------- --------	C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A,U1,U1/A,U2 U3
			1	-	-------- 1021045	C1,C2
	78104-YE9-611	----------	1	-	-------- --------	C1/A
			1	-	1021046 --------	C1,C2
6	78106-YE9-003	IMPELLER ----------	1	-		
7	78107-YE9-003	CASE, VOLUTE ----------	1	-		
8	78110-YE9-003	PACKING, SUCTION ----------	1	-		
9	78112-YE9-003	PACKING, END PLATE ----------	1	-		
10	78114-YE9-003	O-RING ----------	1	-		
11	78115-YB0-003	RING A, SEAL ----------	1	-	-------- --------	C2,C3,U2,U3
	78115-YE9-003	----------	1	-	-------- --------	C1,C1/A,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,GG,GG/A,U1 U1/A
12	78117-YB7-020	CAP, FILLER ----------	2	-		
13	78118-YB0-003	RING, SEAL (B) ----------	2	-		
14	78122-YE9-000	SHIM, ADJUSTER ----------	N	-		

F-1 CASING(WX10)

G 2

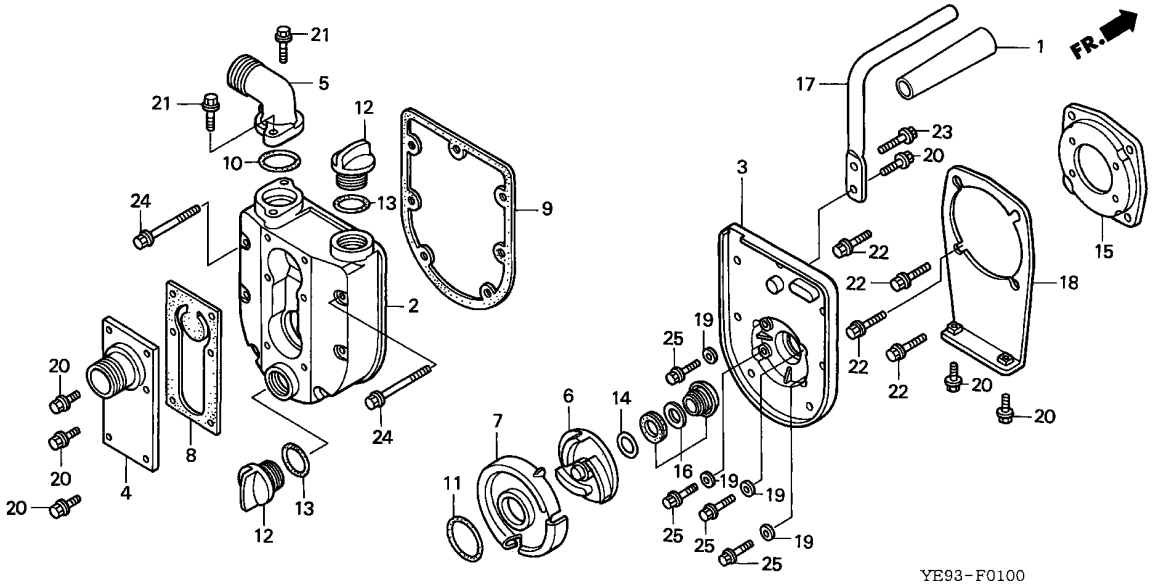

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
15	78125-YE9-003	CASE, SPACER	1	-		
16	78130-YE9-003	SEAL ASSY., MECHANICAL	1	-		
17	78206-YE9-003	HANDLE	1	-		
18	78316-YE9-000	BRACKET COMP., PUMP	1	-		
19	90441-028-010	WASHER, SEALING, 6MM	4	-		
20	95701-06014-00	BOLT, FLANGE, 6X14	9	-		
21	95701-06018-00	BOLT, FLANGE, 6X18	2	-		
22	95701-06020-00	BOLT, FLANGE, 6X20	4	-		
23	95701-06025-00	BOLT, FLANGE, 6X25	1	-		
24	95701-06055-00	BOLT, FLANGE, 6X55	6	-		
25	96001-06018-00	BOLT, FLANGE, 6X18	4	-		

3

F-1-1 CASING(WX10K1)

G 3

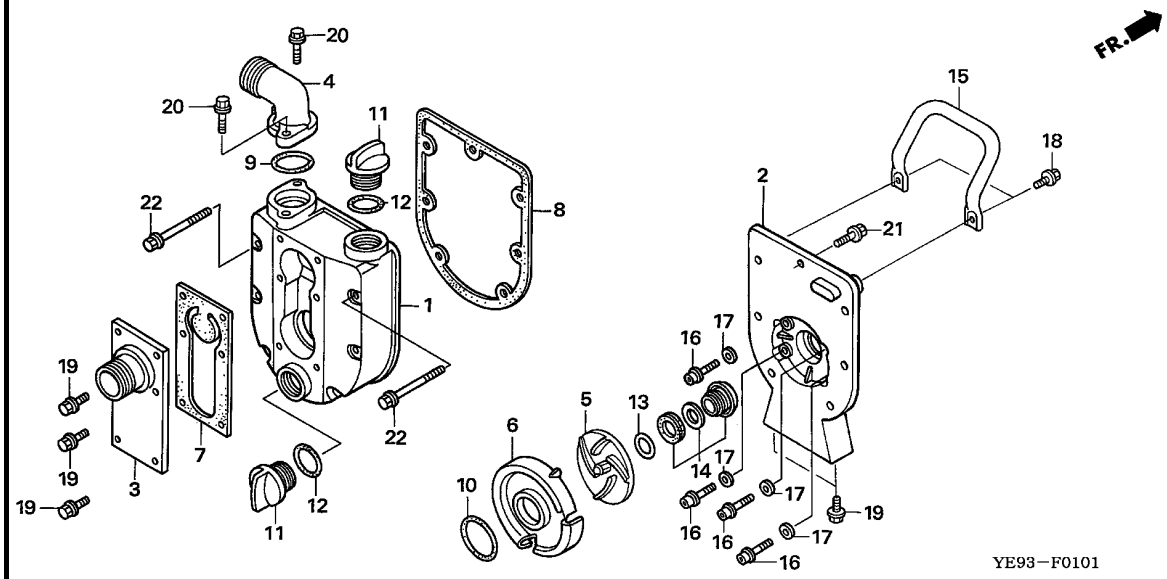

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	2151G6	CASING, WATER PUMP	0.3
2	2151M5	PLATE, WATER PUMP CASING END	0.4
3	2151L8	PLATE, PUMP SUCTION	0.1
4	2151H2	PIPE, CASING :OUTLET	0.1
5	2151G4	IMPELLER, CASING	0.3
6	2151G3	CASE, CASING VOLUTE	0.2
7	2151L9	PACKING, PUMP SUCTION	0.1
8	2151M3	PACKING, WATER PUMP CASING END PLATE	0.2
10	2151M4	RING, CASING VOLUTE CASE SEAL	0.2
13	2151MO	SHIM, CASING ADJUSTER	0.3
14	2151G5	SEAL, CASING MECHANICAL	0.4
15	8101XO	HANDLE, CASING	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	78101-YE9-013	CASING	-	1		
2	78102-YE9-B01	PLATE, END	-	1		
3	78103-YE9-003	PLATE, SUCTION	-	1	-------- --------	D1,D2,D3,E1,E2,GG,U
	78103-YE9-611		-	1	-------- --------	C
4	78104-YE9-003	PIPE, OUTLET	-	1	-------- --------	D1,D2,D3,E1,E2,GG,U
	78104-YE9-611		-	1	-------- --------	C
5	78106-YE9-B01	IMPELLER	-	1		
6	78107-YE9-B01	CASE, VOLUTE	-	1		
7	78110-YE9-003	PACKING, SUCTION	-	1		
8	78112-YE9-003	PACKING, END PLATE	-	1		
9	78114-YE9-003	O-RING	-	1		
10	78115-YE9-003	RING A, SEAL	-	1		
11	78117-YB7-020	CAP, FILLER	-	2		
12	78118-YB0-003	RING, SEAL (B)	-	2		
13	78122-YE9-000	SHIM, ADJUSTER	-	N		
14	78130-YE9-B01	SEAL ASSY., MECHANICAL	-	1		
15	78206-YE9-B00	HANDLE	-	1		
16	90110-YE9-B00	BOLT, FLANGE SOCKET, 5X35	-	4		
17	90452-323-000	WASHER, SEALING, 5MM	-	4		
18	95701-06012-00	BOLT, FLANGE, 6X12	-	2		
19	95701-06014-00	BOLT, FLANGE, 6X14	-	8		
20	95701-06018-00	BOLT, FLANGE, 6X18	-	2		
21	95701-06018-00	BOLT, FLANGE, 6X18	-	1		
22	95701-06055-00	BOLT, FLANGE, 6X55	-	6		

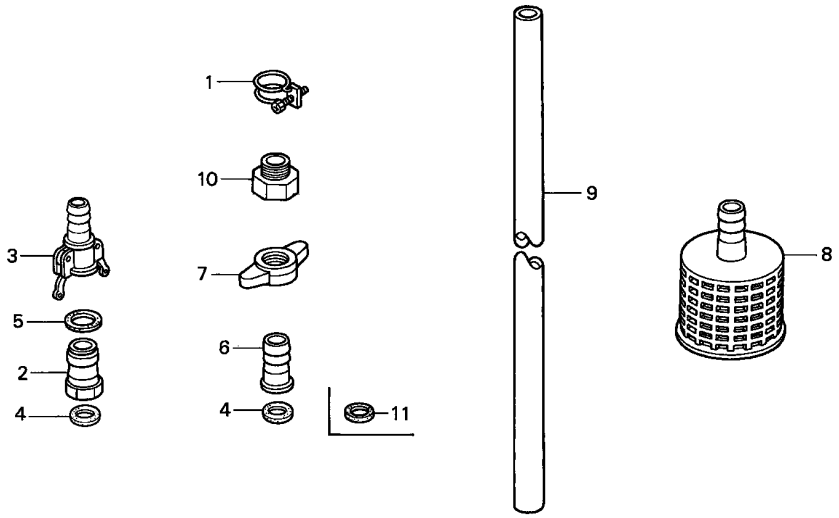

YE93-F0200

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
9	2151L6	HOSE, SUCTION	0.1

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.		Parts catalogue code
1	78139-YB0-710	BAND, HOSE	3	3	--------	--------	C,C1,C1/A,C2,C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,U,U1 U1/A,U2,U3
2	78176-YE9-800	COUPLER, MALE	2	2	--------	--------	C3,D3,D3/A,E3,E3/A,U3
3	78177-YE9-800	COUPLER, FEMALE	2	2	--------	--------	C3,D3,D3/A,E3,E3/A,U3
4	78178-YE9-800	PACKING, COUPLER (MALE)	2	2	--------	--------	C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,U,U1,U1/A,U2,U3
			2	-	--------	1021045	C1,C2
5	78179-YE9-800	PACKING, COUPLER (FEMALE)	2	2	--------	--------	C3,D3,D3/A,E3,E3/A,U3
6	78311-YB0-710	COUPLING, HOSE	2	2	--------	--------	D1,D1/A,D2,D2/A,E1,E1/A,E2,E2/A,U,U1,U1/A,U2
			2	-	--------	1021045	C1,C2
	78311-YE9-610		2	2	--------	--------	C,C1/A
			2	-	1021046	--------	C1,C2
7	78312-YE9-000	RING, HOSE CLAMP	2	2	--------	--------	D1,D1/A,D2,D2/A,E1,E1/A,E2,E2/A,U,U1,U1/A,U2
			2	-	--------	1021045	C1,C2
	78312-YE9-610		2	2	--------	--------	C,C1/A
			2	-	1021046	--------	C1,C2
8	78325-YB0-711	STRAINER COMP.	1	1	--------	--------	C,C1,C1/A,C2,C3,D1,D1/A,D2,D2/A,D3,D3/A,E1,E1/A,E2,E2/A,E3,E3/A,U,U1 U1/A,U2,U3
9	78330-YB0-710	HOSE, SUCTION (5M)	1	1	--------	--------	C2,C3,D2,D2/A,D3,D3/A,E2,E2/A,E3,E3/A,U2,U3
10	78173-YE9-611	ADAPTER	1	1	--------	--------	C,C1,C1/A,C2
11	78313-YE9-610	PACKING, COUPLING	2	2	--------	--------	C,C1/A
			2	-	1021046	--------	C1,C2

F-3 FRAME

G 5

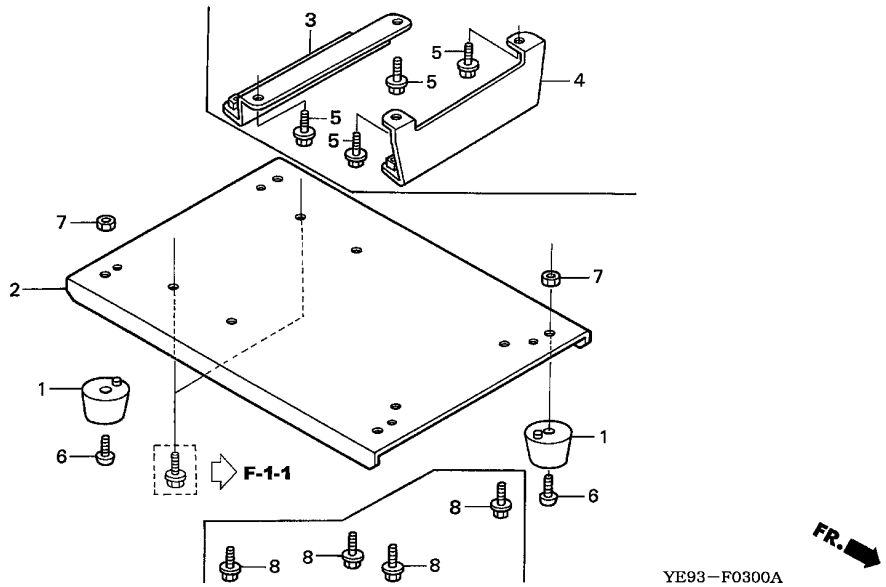

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
1	4101V0	RUBBER, BOTTOM :LEFT FRONT ···	0.1
	4101V1	RUBBER, BOTTOM :RIGHT FRONT ··	0.1
	4101V3	RUBBER, BOTTOM :LEFT REAR ····	0.1
	4101V4	RUBBER, BOTTOM :RIGHT REAR ···	0.1
2	4101A7	BED, FRAME ·····	0.2

Ref. No.	Part No.	Description	Reqd. WX 10	QTY WX 10 K1	Serial No.	Parts catalogue code
1	60407-812-000	RUBBER, BOTTOM ·····	4	4		
2	78203-YE9-000	BED, FRAME ·····	1	-	-------- --------	C1,C2,C3,D1,D2,D3,E1,E2,E3,U1,U2,U3
	78203-YE9-003	·····	1	-	-------- --------	C1/A,D1/A,D2/A,D3/A,E1/A,E2/A,E3/A,GG,GG/A,U1/A
	78203-YE9-B01	·····	-	1		
3	78315-YE9-000	BRACKET A, ENGINE ·····	1	-		
4	78319-YE9-000	BRACKET COMP. B, ENGINE ·····	1	-		
5	90003-892-000	BOLT, FLANGE, 5X12 ·····	4	-		
6	93500-06010-0A	SCREW, PAN, 6X10 ·····	4	-		
	93500-06012-0A	SCREW, PAN, 6X12 ·····	-	4		
7	94001-06000-0S	NUT, HEX., 6MM ·····	4	4		
8	95701-06014-00	BOLT, FLANGE, 6X14 ·····	4	-		

LABEL

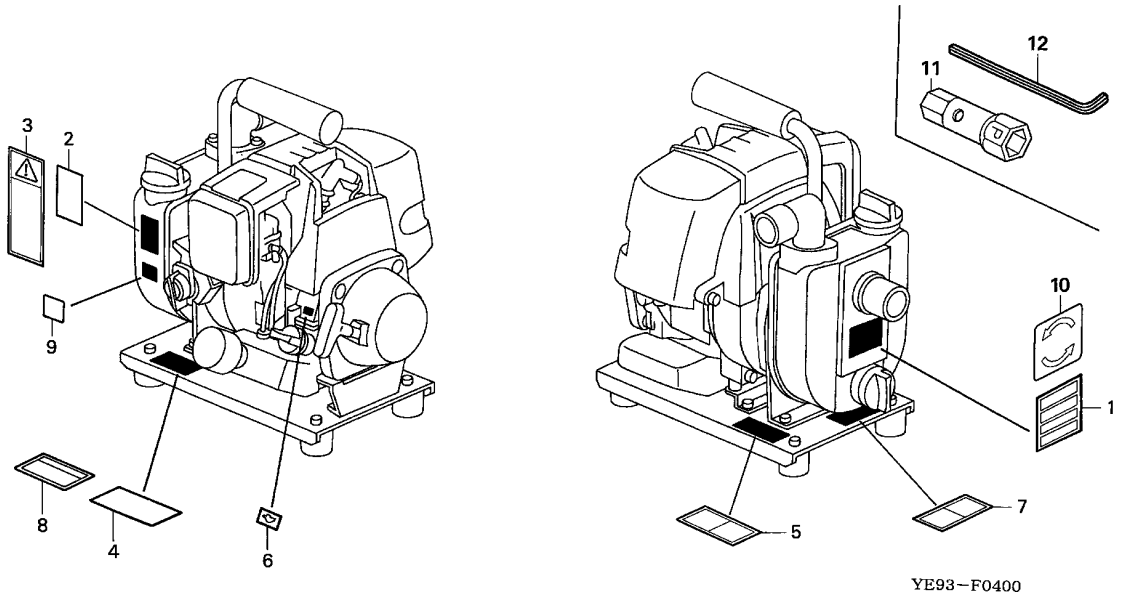

Ref. No.	L.O.N.	(Relative ref. Number) Description	F.R.T.
NO INFORMATION ----------			

Ref. No.	Part No.	Description	Reqd. WX 10	Reqd. QTY WX 10 K1	Serial No.	Parts catalogue code
1	78141-YB0-710	MARK, CAUTION (PUMP) --------	1	-	-------- --------	C3
			1	-	-------- 1021045	C1,C2,U1,U2,U3
2	78141-YE9-610	LABEL, CAUTION (PUMP) -------	1	-	-------- 1021045	U1,U2,U3
	78141-YE9-620	----------	1	-	-------- --------	C3
			1	-	-------- 1021045	C1,C2
	78141-YF3-620	----------	1	1	-------- --------	C,C1/A,U,U1/A
			1	-	1021046 --------	C1,C2,U1,U2,U3
3	78141-YE9-630	LABEL, CAUTION (PUMP) -------	1	-	-------- 1021045	D1,D2,D3
	78141-YE9-660	----------	1	-	-------- 1021045	E1,E2,E3
	78141-YF3-660	----------	1	-	-------- --------	E1/A,E2/A,E3/A,GG,GG/A
			1	-	1021046 --------	E1,E2,E3
	78141-YF3-630	----------	1	-	-------- --------	D1/A,D2/A,D3/A
			1	-	1021046 --------	D1,D2,D3
			-	1	-------- --------	D1,D3,E2
	78141-YE9-B60	----------	-	1	-------- --------	D2,E1,GG
4	78142-YB3-000	LABEL, PUMP WARNING ---------	1	-	-------- --------	C3
			1	-	-------- 1021045	C1,C2
	78142-YF3-610	LABEL, PUMP WARNING (ENGLISH)	1	1	-------- --------	C,C1/A
			1	-	1021046 --------	C1,C2
5	87516-YE9-660	MARK, OPERATOR CAUTION ------	1	-	-------- 1043491	E1,E2,E3
	87516-YF3-660	----------	1	1	-------- --------	E1/A,E2/A,E3/A,GG,GG/A
			1	-	1043492 --------	E1,E2,E3
			-	1	-------- --------	D2,E1
6	87531-YE9-000	MARK, OIL CAUTION ----------	1	-		
7	87539-ZA8-660	MARK, EX. CAUTION ----------	1	1	-------- --------	E1,E1/A,E2/A,E3,E3/A,GG,GG/A
			1	-	-------- --------	E2
			-	1	-------- --------	D2

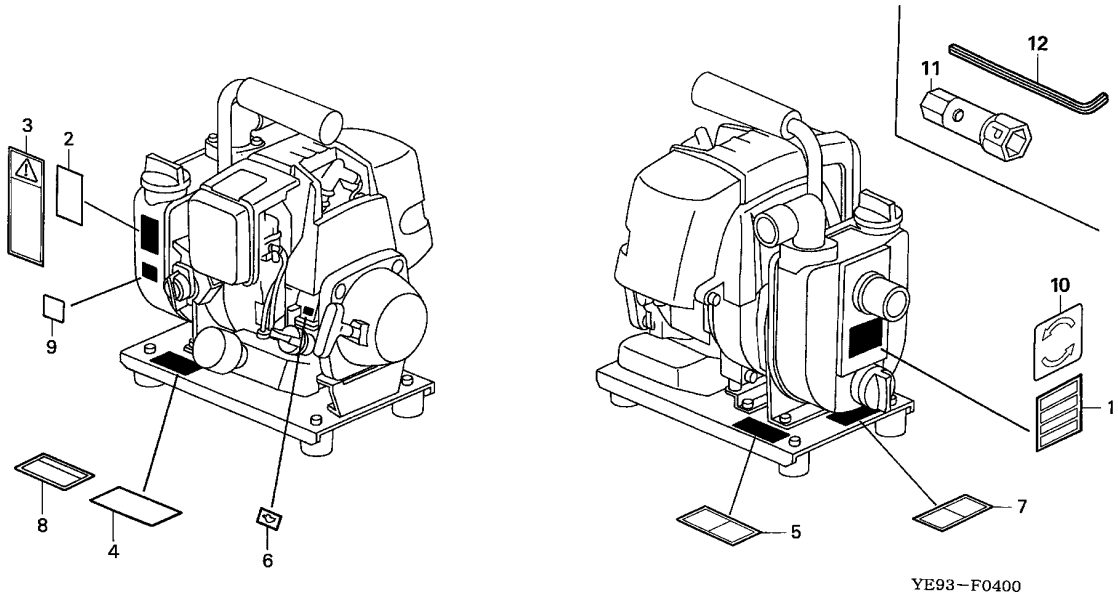

Ref. No.	Part No.	Description	Reqd. WX 10	Reqd. QTY WX 10 K1	Serial No.	Parts catalogue code
8	78142-YF3-620	LABEL, PUMP WARNING (FRENCH)	1	1	-------- --------	C,C1/A
			1	-	1021046 --------	C1,C2
9	87616-YE9-760	LABEL, NOISE LEVEL (89) ·····	1	-	1050928 1053161	E1,E2,E3
	87616-YF3-760	LABEL, NOISE LEVEL (101) ····	1	-	-------- --------	E1/A,E2/A,E3/A,GG,GG/A
			1	-	1053162 --------	E1,E2,E3
	87616-V04-A30	LABEL, NOISE LEVEL (102) ····	-	1	-------- --------	D2,E1,GG
10	78142-YE9-B60	LABEL, DIRECTION (PUMP) ·····	-	1	-------- --------	D2,E1,GG
11	89216-VJ3-000	WRENCH, PLUG (13X16) ········	-	1		
12	89221-KW3-000	WRENCH, HEX., 4MM ···········	-	1		

PART NO. INDEX

Part Number	Address	Page	Ref.
10000			
10100-ZOH-425	D3	21	1
11000			
11010-ZM5-000	D1	19	1
11010-ZM5-020	D1	19	1
11010-ZM5-030	D1	19	1
12000			
12209-ZOH-003	D9	27	1
12310-ZOH-010	D3	21	2
12310-ZM3-003	D1	19	2
12310-ZM3-010	D1	19	2
12312-ZOH-300	D3	21	3
12312-ZM3-020	D1	19	3
12314-ZOH-300	D3	21	4
12367-ZOH-000	D3	21	5
13000			
13010-ZOH-000	D6	24	1
13010-ZM5-000	D5	23	1
13101-ZOH-000	D6	24	2
13101-ZM5-020	D5	23	2
13101-ZM5-030	D5	23	2
13111-ZOH-000	D6	24	3
13111-ZM5-000	D5	23	3
13310-ZOH-801	D6	24	4
13310-ZM5-010	D5	23	4
13310-ZM5-030	D5	23	4
13310-ZM5-040	D5	23	4
14000			
14100-ZM3-010	D7	25	1
14121-ZM5-000	D1	19	4
14121-ZM5-010	D1	19	4
14126-ZOH-003	D9	27	2
14126-ZM3-000	D7	25	2
14320-ZOH-010	D9	27	3
14400-ZOH-003	D9	27	4
14410-ZM3-000	D7	25	3
14431-ZOH-003	D3	21	6
14431-ZM3-000	D7	25	4
14441-ZOH-003	D3	21	7
14451-ZM3-000	D7	25	5
14711-ZOH-000	D9	27	5
14711-ZM5-000	D7	25	6
14721-ZOH-000	D9	27	6
14721-ZM3-000	D7	25	7
14730-ZOH-000	D3	21	8
14731-ZM3-003	D7	25	8
14740-ZOH-000	D3	21	9
14751-ZOH-000	D9	27	7
14751-ZM3-000	D7	25	9
14751-ZM3-010	D7	25	9
14771-ZOH-000	D9	27	8
14771-ZM3-010	D7	25	10
15000			
15422-ZOH-000	D3	21	10
15510-ZOH-000	D3	21	11
15511-ZM3-000	D1	19	5
15571-ZM3-003	D1	19	6
	D3	21	12
15572-ZOH-000	D3	21	13
15572-ZM3-000	D1	19	7
15600-ZF0-003	D3	21	14
15600-ZM3-003	D2	20	22
15625-ZE1-003	D1	19	9
	D3	21	15
15721-ZOH-800	D3	21	16
16000			
16010-ZM3-004	D14	32	1
	E1	35	1
16011-ZOH-003	E1	35	2
16011-ZM3-004	D14	32	2
16011-ZM3-014	D14	32	2
16013-ZOH-003	E1	35	3
16013-ZM3-004	D14	32	4
16014-ZM3-004	D14	32	5
	E1	35	4
16015-ZOH-003	E1	35	5
16015-ZM3-004	D14	32	6
16015-ZM3-602	D14	32	6
16015-ZM3-802	D14	32	6
16017-ZM3-004	D14	32	7
	E1	35	6
16018-ZM3-004	D14	32	8
16018-ZM3-802	D14	32	8
	E1	35	7
16019-ZM3-004	D14	32	9
	E1	35	8
16020-ZM3-004	D14	32	10
	E1	35	9
16021-ZM3-004	D14	32	11
	E1	35	10
16022-ZM3-004	D14	32	12
16022-ZM3-014	D14	32	12
	E1	35	11
16023-ZM3-004	D14	32	13
	E1	35	12
16024-ZOH-003	E1	35	13
16024-ZM3-004	D14	32	14
16025-ZM3-004	D15	33	15
	E1	35	14
16026-ZM3-004	D15	33	16
	E1	35	15
16027-ZM3-004	D15	33	17
	E1	35	16
16028-ZM3-004	D15	33	18
	E1	35	17
16029-ZM3-004	D15	33	19
	E1	35	18
16030-ZM3-004	D15	33	20
	E1	35	19
16031-ZM3-004	D15	33	21
	E1	35	20
16032-ZM3-004	D15	33	22
	E1	35	21
16033-ZM3-004	D15	33	23
16035-ZM3-802	D16	34	36
	E1	35	22
16100-ZOH-832	E1	35	23
16100-ZOH-843	E1	35	23
16100-ZOH-G91	E1	35	23
16100-ZM5-004	D15	33	24
16100-ZM5-806	D15	33	24
16100-ZM5-807	D15	33	24
16100-ZM5-808	D15	33	24
16100-ZM5-813	D15	33	24
16100-ZM5-814	D15	33	24
16100-ZM5-824	D15	33	24
16100-ZM5-825	D15	33	24
16100-ZM5-826	D15	33	24
16211-ZM3-000	D15	33	25
16211-ZM3-U30	D15	33	25
16212-ZM3-000	D15	33	26
16221-ZM3-000	D15	33	27
	E2	36	24
16221-ZM3-G10	D15	33	27
16222-ZOH-800	E2	36	25
16500-ZM5-800	E11	45	1
16500-ZM5-801	E11	45	1
16500-ZM5-810	E11	45	1
16500-ZM5-811	E11	45	1
16571-892-000	E12	46	2
16571-ZOH-800	E12	46	1
16571-ZM5-800	E11	45	2
16574-ZE1-000	E11	45	3
	E12	46	3
16575-ZH8-000	E11	45	4
	E12	46	4
16578-ZE1-000	E11	45	5
	E12	46	5
16580-ZOH-800	E12	46	6
16580-ZM5-800	E11	45	6
16580-ZM5-801	E11	45	6
16584-883-300	E11	45	7
17000			
17204-ZOH-000	E4	38	1
17204-ZM3-000	E3	37	1
17211-ZOH-000	E4	38	2
17211-ZM3-000	E3	37	2
17220-ZOH-000	E4	38	3
17220-ZM3-000ZA	E3	37	3
17220-ZM3-010ZA	E3	37	3
17220-ZM3-010ZB	E3	37	3
17220-ZM3-010ZD	E3	37	3
17231-ZOH-000	E4	38	4
17231-ZM3-000ZA	E3	37	4
17231-ZM3-010ZA	E3	37	4
17231-ZM3-010ZB	E3	37	4
17231-ZM3-010ZD	E3	37	4
17504-ZM3-003	E7	41	1
	E8	42	1
17511-ZOH-023	E8	42	2
17511-ZM3-003	E7	41	2
17511-ZM5-003	E7	41	2
17511-ZM5-013	E7	41	2
17511-ZM5-023	E7	41	2
17532-ZM3-010	E7	41	3
17533-ZOH-000	E8	42	3
17533-ZM3-000	E7	41	4
17561-ZM3-010	E7	41	5
17620-ZM3-043	E7	41	6
17620-ZM3-053	E7	41	6
	E8	42	4
17620-ZM3-815	E7	41	7
17620-ZM3-816	E7	41	7
	E8	42	9
17672-ZOH-003	E7	41	8
	E8	42	5
17672-ZM3-003	E7	41	8
	D11	29	9
17701-ZOH-003	E8	42	6
17701-ZM3-003	E7	41	9
17702-ZOH-003	E8	42	7
17702-ZM3-003	E7	41	10
17841-ZOH-800	E12	46	7
17841-ZM5-800	E11	45	8
18000			
18292-167-890	D16	34	35
18310-ZOH-000	E6	40	1
18310-ZOH-800	E6	40	2
18310-ZM3-000	E5	39	1
18350-ZOH-800	E6	40	3
18515-ZOH-000	E6	40	4
18515-ZM3-000	E5	39	2
18515-ZM3-810	E5	39	2
19000			
19610-ZOH-801	D13	31	1
19611-ZM5-000	D12	30	1
19631-ZOH-000	E2	36	26
19632-ZOH-800	E2	36	27
19651-ZM3-000	D15	33	28
19651-ZM3-U30	D15	33	28
19720-ZOH-000ZB	E14	48	1
19720-ZOH-H10ZA	E14	48	1
19720-ZM3-000ZA	E13	47	1
19720-ZM3-000ZB	E13	47	1
19720-ZM3-H10	E13	47	1
19722-ZM3-000	E5	39	3
22000			
22542-900-000	G1	52	1
28000			
28400-ZOH-003	D11	29	1
28400-ZM3-003ZA	D10	28	1
28414-ZOH-003	D11	29	2
28414-ZM3-003	D10	28	2
28421-ZOH-003	D11	29	3
28421-ZM3-003	D10	28	3
28433-ZM3-003	D10	28	4
	D11	29	4
28442-ZOH-003	D11	29	5
28442-ZM3-003	D10	28	5
28447-ZM3-000	D10	28	6
28451-ZOH-003	D11	29	6
28451-ZM3-003	D10	28	7
28459-ZOH-003	D11	29	7
28459-ZM3-003	D10	28	8
28461-ZM3-003	D10	28	9
	D11	29	8
28462-ZM3-003	D10	28	10
	D11	29	9
30000			
30500-ZOH-023	E10	44	1
30500-ZM3-003	E9	43	1
30519-ZM3-000	E9	43	2
30701-883-000	E12	46	8
31000			
31110-ZOH-811	E10	44	2
31110-ZM5-800	E9	43	3
31914-ZOH-003	D3	21	17
31915-ZOH-003	D3	21	17
31916-ZOH-003	D3	21	17
32000			
32195-ZOH-800	E10	44	3
32195-ZM5-800	E9	43	4
35000			
35120-ZOD-V81	E12	46	9
36000			
36100-ZE1-015	E11	45	9
36100-ZH8-W41	E11	45	9
40000			
40210-ZOH-800	D13	31	2
40215-ZM5-G00	E9	43	5

PART NO. INDEX

H 2

Part Number	Address	Page	Ref.
41000			
41313-PL3-000	D7	25	11
60000			
60407-812-000	G5	56	1
78000			
78101-YE9-003	G1	52	2
78101-YE9-013	G1	52	2
	G3	54	1
78102-YE9-003	G1	52	3
78102-YE9-B01	G3	54	2
78103-YE9-003	G1	52	4
	G3	54	3
78103-YE9-611	G1	52	4
	G3	54	3
78104-YE9-003	G1	52	5
	G3	54	4
78104-YE9-611	G1	52	5
	G3	54	4
78106-YE9-003	G1	52	6
78106-YE9-B01	G3	54	5
78107-YE9-003	G1	52	7
78107-YE9-B01	G3	54	6
78110-YE9-003	G1	52	8
	G3	54	7
78112-YE9-003	G1	52	9
	G3	54	8
78114-YE9-003	G1	52	10
	G3	54	9
78115-YB0-003	G1	52	11
78115-YE9-003	G1	52	11
	G3	54	10
78117-YB7-020	G1	52	12
	G3	54	11
78118-YB0-003	G1	52	13
	G3	54	12
78122-YE9-000	G1	52	14
	G3	54	13
78125-YE9-003	G2	53	15
78130-YE9-003	G2	53	16
78130-YE9-B01	G3	54	14
78139-YB0-710	G4	55	1
78141-YB0-710	G6	57	1
78141-YE9-610	G6	57	2
78141-YE9-620	G6	57	2
78141-YE9-630	G6	57	3
78141-YE9-660	G6	57	3
78141-YE9-B60	G6	57	3
78141-YF3-620	G6	57	2
78141-YF3-630	G6	57	3
78141-YF3-660	G6	57	3
78142-YB3-000	G6	57	4
78142-YE9-B60	G7	58	10
78142-YF3-610	G6	57	4
78142-YF3-620	G7	58	8
78173-YE9-611	G4	55	10
78176-YE9-800	G4	55	2
78177-YE9-800	G4	55	3
78178-YE9-800	G4	55	4
78179-YE9-800	G4	55	5
78203-YE9-000	G5	56	2
78203-YE9-003	G5	56	2
78203-YE9-B01	G5	56	2
78206-YE9-003	G2	53	17
78206-YE9-B00	G3	54	15
78311-YB0-710	G4	55	6
78311-YE9-610	G4	55	6
78312-YE9-000	G4	55	7
78312-YE9-610	G4	55	7
78313-YE9-610	G4	55	11
78315-YE9-000	G5	56	3
78316-YE9-000	G2	53	18
78319-YE9-000	G5	56	4
78325-YB0-711	G4	55	8
78330-YB0-710	G4	55	9
87000			
87135-ZE2-020	E15	49	4
	E16	50	1
87516-YE9-660	G6	57	5
87516-YF3-660	G6	57	5
87521-ZOH-G40	E16	50	2
87521-ZOH-H10	E16	50	3
87521-ZM5-G00	E15	49	1
87521-ZM5-G01	E15	49	1
87521-ZM5-H10	E15	49	5
87531-YE9-000	E16	50	4
	G6	57	6
87531-ZOH-000	E16	50	5
87532-ZM3-G00	E15	49	2
	E16	50	6
87539-ZA8-660	G6	57	7
87594-VF9-G11	E16	50	4
87601-ZOH-G50	E16	50	7
87601-ZOH-G60	E16	50	7
87601-ZOH-G80	E16	50	7
87601-ZOH-G90	E16	50	7
87601-ZOH-H10	E16	50	7
87601-ZM5-G20	E15	49	3
87601-ZM5-G30	E15	49	3
87601-ZM5-G40	E15	49	3
87601-ZM5-G50	E15	49	3
87601-ZM5-H10	E15	49	3
87616-V04-A30	G7	58	9
87616-YE9-760	G7	58	9
87616-YF3-760	G7	58	9
87637-ZM3-800	E15	49	6
	E16	50	8
87660-ZOH-000	E16	50	9
87660-ZOH-J00	E16	50	9
89000			
89000-ZM3-000	F1	51	1
89216-045-010	F1	51	2
89216-VJ3-000	G7	58	11
89221-KW3-000	G7	58	12
90000			
90001-ZOH-003	E6	40	5
90001-ZM3-000	D1	19	10
90002-ZM3-000	D1	19	11
90003-892-000	G5	56	5
90003-ZM3-000	D1	19	12
90004-ZM3-000	E5	39	4
90005-896-000	E11	45	10
90005-ZM3-000	D1	19	13
	D10	28	11
	D12	30	2
90009-ZOH-003	D3	21	18
	D13	31	3
90010-ZOH-003	D3	21	19
90010-ZM3-000	D15	33	29
90011-ZOH-003	E6	40	6
90011-ZOH-801	E12	46	10
90011-ZM3-000	D1	19	14
90012-ZOH-005	E10	44	4
90012-ZM3-003	D10	28	12
	D11	29	10
90013-ZOH-004	D3	21	20
90014-ZOH-801	E2	36	28
90015-ZOH-003	E14	48	2
90017-ZOH-000	D3	21	21
90018-ZOH-003	D11	29	11
	E2	36	29
90019-ZOH-003	D3	21	22
90055-ZE1-000	E6	40	7
90103-P4V-010	D16	34	37
90110-YE9-B00	G3	54	16
90112-GK8-010	D15	33	30
	E13	47	2
90112-ZM3-U30	D15	33	30
90114-SA0-000	E11	45	12
	E12	46	11
90136-SM4-901	E6	40	8
90206-ZM3-000	D3	21	23
	D7	25	12
90355-427-770	E10	44	5
90441-028-010	G2	53	19
90452-323-000	G3	54	17
90481-GW3-000	D1	19	15
90659-680-013	D15	33	31
91000			
91211-ZOH-003	D6	24	5
91212-ZOH-003	D6	24	6
91213-ZM3-003	D5	23	5
91213-ZM5-800	D5	23	6
91214-ZM3-003	D5	23	6
91301-ZM3-000	D15	33	32
	E2	36	30
91308-ZOH-003	E2	36	31
91401-ZM3-003	E7	41	11
	E8	42	8
91501-ZM3-010	D1	19	16
91502-ZM3-000	E13	47	3
91503-ZM3-000	E3	37	5
91504-ZM3-003	D10	28	13
	D11	29	12
91505-ZM3-003	D10	28	14
91506-ZM3-000	D1	19	17
	D11	29	13
93000			
93401-04016-00	D1	19	18
93401-05016-00	E9	43	6
93500-03005-0A	D1	19	19
	D4	22	24
93500-05025-0A	E11	45	13
	E12	46	12
93500-06010-0A	G5	56	6
93500-06012-0A	G5	56	6
93891-05008-00	E5	39	5
93894-05010-00	D15	33	33
	E5	39	6
93894-05016-00	E5	39	7
93901-34320	D4	22	25
94000			
94001-06000-0S	G5	56	7
94050-05000	E3	37	6
	E4	38	5
94101-05800	D16	34	38
94305-40102	D4	22	26
94401-16120	E9	43	7
95000			
95002-41200-08	D4	22	27
95002-41300-04	D4	22	28
95005-70068-30	D2	20	20
95701-06012-00	G3	54	18
95701-06014-00	G2	53	20
	G3	54	19
	G5	56	8
95701-06018-00	G2	53	21
	G3	54	20
			21
95701-06020-00	G2	53	22
95701-06025-00	G2	53	23
95701-06055-00	G2	53	24
	G3	54	22
96000			
96001-06018-00	G2	53	25
96001-06022-00	D13	31	4
96150-60010-10	D13	31	5
98000			
98056-55757	D2	20	21
98056-55777	D2	20	21
99000			
99005-01000	F1	51	3
99008-01600	F1	51	4
99101-ZOH-0320	E2	36	32
99101-ZM3-0330	D16	34	34
99101-ZM3-0400	D15	33	34
	D16	34	34
99101-ZM3-0410	D15	33	34
	D16	34	34
99101-ZM3-0420	D15	33	34
	D16	34	34
99101-ZM5-0330	E2	36	32
99101-ZM5-0340	E2	36	32
99101-ZM5-0350	E2	36	32
99102-ZM3-0340	D16	34	34
99102-ZM3-0350	D16	34	34

4

PART NAME INDEX

I 1

Part name	Address	Page	Ref.
[A]			
ADAPTER	G4	55	10
ARM, EX. VALVE ROCKER	D3	21	7
ARM, IN. VALVE ROCKER	D3	21	6
ARM, SWING	D10	28	8
	D11	29	7
ARM, VALVE ROCKER	D7	25	4
ARRESTER COMP., SPARK	E6	40	3
[B]			
BAG, TOOL, 160MM	F1	51	4
BAND, HOSE	G4	55	1
BAR A, HANDLE	F1	51	3
BASE COMP., CONTROL	E11	45	6
	E12	46	6
BEARING, RADIAL BALL, 6001UU	D13	31	5
BED, FRAME	G5	56	2
BELT, TIMING	D9	27	4
BODY ASSY., AIR PURGE	D14	32	7
	E1	35	6
BODY ASSY., PUMP	D14	32	6
	E1	35	5
BOLT-WASHER, 4X16	D1	19	18
BOLT-WASHER, 5X16	E9	43	6
BOLT, 5X59	E2	36	28
BOLT, FLANGE SOCKET, 5X35	G3	54	16
BOLT, FLANGE, 5X12	G5	56	5
BOLT, FLANGE, 5X14	D1	19	11
BOLT, FLANGE, 5X16	E11	45	10
BOLT, FLANGE, 5X18	D1	19	13
	D10	28	11
	D12	30	2
BOLT, FLANGE, 5X22	D1	19	10
	D15	33	30
	E13	47	2
BOLT, FLANGE, 5X32	D15	33	30
BOLT, FLANGE, 5X35	D16	34	37
BOLT, FLANGE, 5X50	E5	39	4
BOLT, FLANGE, 5X55	D1	19	12
BOLT, FLANGE, 6X12	G3	54	18
BOLT, FLANGE, 6X14	G2	53	20
	G3	54	19
	G5	56	8
BOLT, FLANGE, 6X18	G2	53	21
			25
	G3	54	20
			21
BOLT, FLANGE, 6X20	G2	53	22
BOLT, FLANGE, 6X22	D13	31	4
BOLT, FLANGE, 6X25	G2	53	23
BOLT, FLANGE, 6X55	G2	53	24
	G3	54	22
BOLT, HEX., 5X75	D15	33	29
BOLT, SOCKET, 4X14	E10	44	4
BOLT, SOCKET, 5X10	E6	40	6
	E12	46	10
BOLT, SOCKET, 5X12	D3	21	22
BOLT, SOCKET, 5X16	D11	29	11
	E2	36	29
BOLT, SOCKET, 5X20	D3	21	18
	D13	31	3
BOLT, SOCKET, 5X30	D3	21	19
BOLT, STUD, 2.5X42	E6	40	5
BOLT, TOP COVER	E14	48	2
BRACKET A, ENGINE	G5	56	3
BRACKET COMP. B, ENGINE	G5	56	4
BRACKET COMP., PUMP	G2	53	18
[C]			
CAMSHAFT ASSY.	D7	25	1
CAP ASSY., FUEL TANK	E7	41	6
			7
	E8	42	4
			9
CAP ASSY., OIL FILLER	D2	20	22
	D3	21	14
CAP, FILLER	G1	52	12
	G3	54	11
CARBURETOR ASSY.	D15	33	24
	E1	35	23
CASE COMP., AIR CLEANER	E3	37	3
	E4	38	3
CASE, RECOIL STARTER	D10	28	2
	D11	29	2
CASE, SPACER	G2	53	15
CASE, VOLUTE	G1	52	7
	G3	54	6
CASING	G1	52	2
	G3	54	1
CLAMP, TUBE	D4	22	27
			28
CLIP, HIGH TENSION CORD	E12	46	8
CLIP, TUBE	E7	41	11
	E8	42	8
CLIP, WIRE HARNESS	D15	33	31
COIL ASSY., IGNITION	E9	43	1
	E10	44	1
COLLAR	D10	28	13
			14
	D11	29	12
COLLAR A, HEAD COVER	D1	19	17
	D11	29	13
COLLAR, AIR CLEANER	E3	37	5
COLLAR, HEAD COVER	D1	19	16
COLLAR, TOP COVER	E13	47	3
CONTROL ASSY.	E11	45	1
CORD, STOP SWITCH	E9	43	4
	E10	44	3
COUPLER, FEMALE	G4	55	3
COUPLER, MALE	G4	55	2
COUPLING, HOSE	G4	55	6
COVER COMP., FAN	D13	31	1
COVER COMP., HEAD	D1	19	2
COVER COMP., TOP	E13	47	1
	E14	48	1
COVER, AIR CLEANER	E3	37	4
	E4	38	4
COVER, CAMSHAFT	D1	19	4
COVER, CYLINDER HEAD	D3	21	2
COVER, FAN	D12	30	1
COVER, OIL OUTLET VALVE	D1	19	5
COVER, PRIMER PUMP	D15	33	16
	E1	35	15
CRANKCASE SET	D1	19	1
	D3	21	1
CRANKSHAFT COMP.	D5	23	4
	D6	24	4
[D]			
DIAPHRAGM ASSY., METERING	D14	32	4
	E1	35	3
DIAPHRAGM, PUMP	D14	32	5
	E1	35	4
[E]			
ELEMENT, AIR CLEANER	E3	37	2
	E4	38	2
EMBLEM	E15	49	1
			5
[F]			
FAN, RATCHET	D10	28	6
FILTER, BREATHER	D3	21	5
FILTER, FUEL	E7	41	8
	E8	42	5
FILTER, FUEL INLET	D16	34	36
	E1	35	22
FLYWHEEL COMP.	E9	43	3
	E10	44	2
[G]			
GASKET, METERING DIAPHRAGM	D14	32	1
	E1	35	1
GASKET, PUMP	D14	32	2
	E1	35	2
GRIP, LEVER	G1	52	1
GROMMET, FUEL TUBE	E7	41	1
	E8	42	1
GROMMET, HEAD COVER	D3	21	4
GUIDE, AIR EX.	E5	39	2
	E6	40	4
GUIDE, AIR INLET	D15	33	28
GUIDE, ROPE	D10	28	4
	D11	29	4
[H]			
HANDLE	G2	53	17
	G3	54	15
HOSE, SUCTION	G4	55	9

5

PART NAME INDEX

I 2

Part name	Address	Page	Ref.
[I]			
IMPELLER	G1	52	6
	G3	54	5
INNER COVER, TOP	E5	39	3
INSULATOR, CARBURETOR	D15	33	25
[J]			
JET	D15	33	34
	D16	34	34
	E2	36	32
[K]			
KEY, WOODRUFF, 16X12	E9	43	7
KNOB, RECOIL STARTER	D10	28	9
	D11	29	8
[L]			
LABEL, CAUTION	G6	57	2
			3
LABEL, DIRECTION	G7	58	10
LABEL, E-SPEC	E15	49	4
	E16	50	1
LABEL, NOISE LEVEL	G7	58	9
LABEL, PUMP WARNING	G6	57	4
	G7	58	8
LEVER, CONTROL	E11	45	2
	E12	46	1
LEVER, METERING	D14	32	13
	E1	35	12
LIFTER COMP., EX. VALVE	D3	21	9
LIFTER COMP., IN. VALVE	D3	21	8
LIFTER, VALVE	D7	25	8
[M]			
MARK	E15	49	6
	E16	50	8
			9
MARK, CAUTION	G6	57	1
MARK, EMBLEM	E16	50	2
			3
MARK, EX. CAUTION	G6	57	7
MARK, HONDA	E16	50	5
MARK, OIL CAUTION	E16	50	4
	G6	57	6
MARK, OPERATOR CAUTION	G6	57	5
MARK, THROTTLE INDICATION	E15	49	2
	E16	50	6
MARK, TYPE	E15	49	3
	E16	50	7
MUFFLER COMP.	E5	39	1
	E6	40	1
			2
[N]			
NUT, FLANGE, 5MM	E3	37	6
	E4	38	5
NUT, FLANGE, 7MM	E10	44	5
NUT, HEX., 6MM	G5	56	7
NUT, SELF-LOCK, 5MM	E6	40	8
NUT, SELF-LOCK, 6MM	E11	45	12
	E12	46	11
NUT, TAPPET ADJUSTING	D3	21	23
	D7	25	12
[O]			
OIL SEAL, 10X20X5	D6	24	6
OIL SEAL, 12X24X5	D6	24	5
OIL SEAL, 12X25X6	D5	23	5
OIL SEAL, 15X25X6	D5	23	6
O-RING	D15	33	15
	E1	35	14
	G1	52	10
	G3	54	9
O-RING, 12.3X2.4	E2	36	31
O-RING, 14.8X2.4	D15	33	32
	E2	36	30
[P]			
PACKING, CARBURETOR	D15	33	27
	E2	36	24
PACKING, COUPLER	G4	55	4
			5
PACKING, COUPLING	G4	55	11
PACKING, END PLATE	G1	52	9
	G3	54	8
PACKING, HEAD COVER	D1	19	3
PACKING, INSULATOR	D15	33	26
PACKING, OIL FILLER CAP	D1	19	9
	D3	21	15
PACKING, PROTECTOR	D16	34	35
PACKING, SHROUD	E2	36	25
PACKING, SUCTION	G1	52	8
	G3	54	7
PIN, METERING LEVER	D14	32	12
	E1	35	11
PIN, PISTON	D5	23	3
	D6	24	3
PIN, SPRING, 4X10	D4	22	26
PIPE, OUTLET	G1	52	5
	G3	54	4
PISTON	D5	23	2
	D6	24	2
PIVOT, ROCKER ARM	D7	25	5
PLATE ASSY., OIL OUTLET VALVE	D3	21	11
PLATE, END	G1	52	3
	G3	54	2
PLATE, OIL TRAP	E3	37	1
	E4	38	1
PLATE, STOPPER	D1	19	7
PLATE, STOPPER	D3	21	13
PLATE, SUCTION	G1	52	4
	G3	54	3
PLUG	D15	33	23
PLUG, SPARK	D2	20	21
	D3	21	17
PULLEY COMP., CAM	D9	27	3
PULLEY, RECOIL STARTER	D10	28	7
	D11	29	6
PUMP, PRIMER	D15	33	22
	E1	35	21
[R]			
REEL, RECOIL STARTER	D10	28	3
	D11	29	3
RETAINER, VALVE SPRING	D7	25	10
	D9	27	8
RING A, SEAL	G1	52	11
	G3	54	10
RING SET, PISTON	D5	23	1
	D6	24	1
RING, HOSE CLAMP	G4	55	7
RING, RETAINING	E1	35	13
RING, SEAL	G1	52	13
	G3	54	12
RING, SPRING RETAINING	D14	32	14
ROD, PUSH	D7	25	3
ROD, THROTTLE	E11	45	8
	E12	46	7
ROLLER	D7	25	2
ROLLER, 4X28	D7	25	11
ROLLER, 4X29.8	D9	27	2
ROPE, RECOIL STARTER	D10	28	10
	D11	29	9
RUBBER A, TANK MOUNTING	E7	41	3
RUBBER B, TANK MOUNTING	E7	41	4
RUBBER, BOTTOM	G5	56	1
RUBBER, TANK MOUNTING	E8	42	3
[S]			
SCREEN, INLET	D14	32	8
	E1	35	7
SCREW-WASHER, 5X10	D15	33	33
	E5	39	6
SCREW-WASHER, 5X16	E5	39	7
SCREW-WASHER, 5X8	E5	39	5
SCREW, METERING LEVER PIN	D14	32	11
	E1	35	10
SCREW, PAN, 3X5	D1	19	19
	D4	22	24
SCREW, PAN, 4X8	D3	21	20
SCREW, PAN, 5X25	E11	45	13
	E12	46	12
SCREW, PAN, 6X10	G5	56	6
SCREW, PAN, 6X12	G5	56	6
SCREW, PAN, 6X8	D1	19	14
SCREW, PUMP COVER	D15	33	19

5

PART NAME INDEX

I 3

Part name	Address	Page	Ref.
SCREW, PUMP COVER	E1	35	18
SCREW, SETTING	D10	28	12
	D11	29	10
SCREW, TAPPET ADJUSTING	D3	21	21
SCREW, TAPPING, 4X12	D4	22	25
SCREW, TAPPING, 4X6	E6	40	7
SCREW, THROTTLE COLLAR	D15	33	18
	E1	35	17
SEAL ASSY., MECHANICAL	G2	53	16
	G3	54	14
SEAL, HEAD COVER	D3	21	3
SEAL, VALVE STEM	D9	27	1
SHAFT COMP., P.T.O.	D13	31	2
SHAFT, P.T.O.	E9	43	5
SHIM, ADJUSTER	G1	52	14
	G3	54	13
SHROUD	E2	36	26
SPACER, CONTROL LEVER	E11	45	5
	E12	46	5
SPACER, SHROUD	E2	36	27
SPRING, CONTROL ADJUSTING	E11	45	7
	E12	46	2
SPRING, LEVER	E11	45	3
	E12	46	3
SPRING, METERING LEVER	D14	32	10
	E1	35	9
SPRING, PUMP	D15	33	20
	E1	35	19
SPRING, RECOIL STARTER	D10	28	5
	D11	29	5
SPRING, VALVE	D7	25	9
	D9	27	7
STARTER ASSY., RECOIL	D10	28	1
	D11	29	1
STAY, FUEL TANK	E7	41	5
STRAINER COMP.	G4	55	8
SWITCH ASSY., ENGINE STOP	E11	45	9
	E12	46	9
SWIVEL	D15	33	17
	E1	35	16
[T]			
TANK, FUEL	E7	41	2
	E8	42	2
TOOL KIT	F1	51	1
TUBE A, CORRUGATED	E9	43	2
TUBE, 7X68	D2	20	20
TUBE, BREATHER	D3	21	16
TUBE, FUEL	E7	41	9
TUBE, FUEL RETURN	E7	41	10
	E8	42	7
TUBE, FUEL TANK	E8	42	6
TUBE, OIL	D3	21	10
[V]			
VALVE, EX.	D7	25	7
	D9	27	6
VALVE, INLET NEEDLE	D14	32	9
	E1	35	8
VALVE, IN.	D7	25	6
	D9	27	5
VALVE, OIL OUTLET	D1	19	6
	D3	21	12
[W]			
WASHER	D15	33	21
	E1	35	20
WASHER, CONTROL LEVER	E11	45	4
	E12	46	4
WASHER, PLAIN, 5MM	D16	34	38
WASHER, SEALING, 5MM	G3	54	17
WASHER, SEALING, 6MM	G2	53	19
WASHER, SEALING, 6.5MM	D1	19	15
WRENCH, HEX., 4MM	G7	58	12
WRENCH, PLUG	G7	58	11
WRENCH, SPARK PLUG	F1	51	2

5

1 FOREWORD INDEX

2 ENGINE GROUP

3 FRAME GROUP

4 PART NUMBER INDEX

5 PART NAME INDEX

HONDA

The Power of Dreams

E.O A 100.2005.01

Published by Honda Motor Co., Ltd.
Printed in Japan